
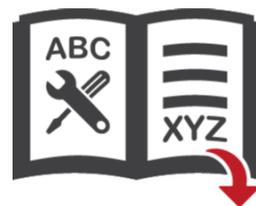


TV Ceiling Mount

Black

**Black &
White**

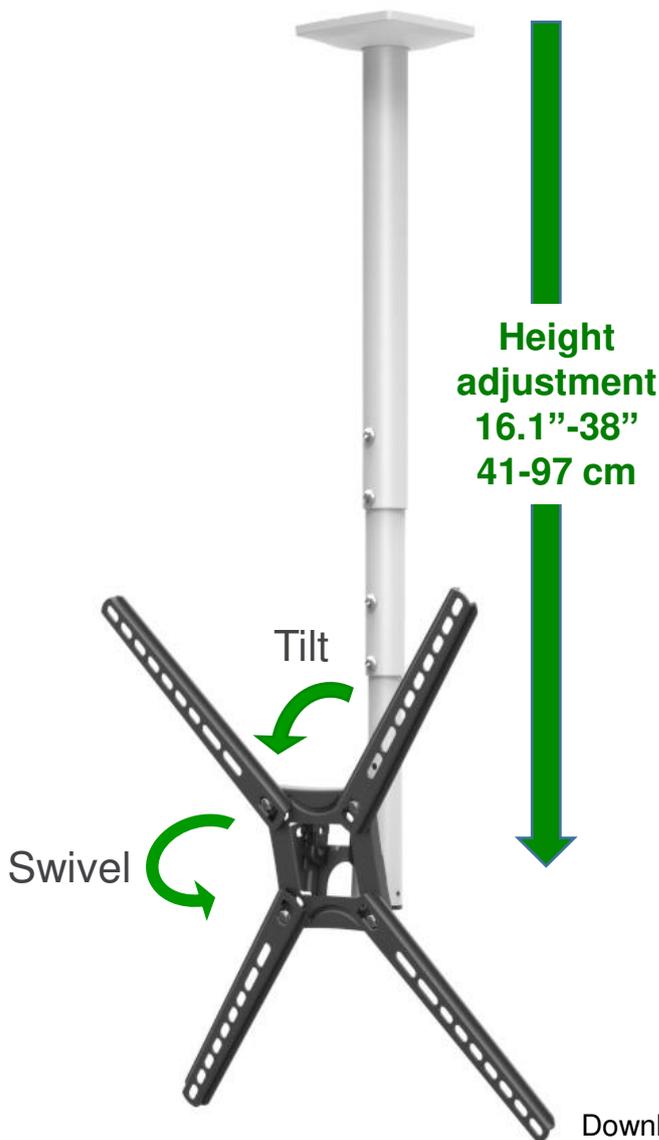

Download Assembly Instructions with Text

For more information: [barkanmounts.com](https://www.barkanmounts.com)

If you are satisfied with the product, please give us a 5 stars ★★★★★ rating on the website you bought it from. If you are not satisfied please contact us at <https://www.barkanmounts.com/support> and we will solve the problem for you.




**Safety instructions and installation warnings (provided separately)
must be read in full, prior to assembly.**

Included Parts not to scale





Required Tools




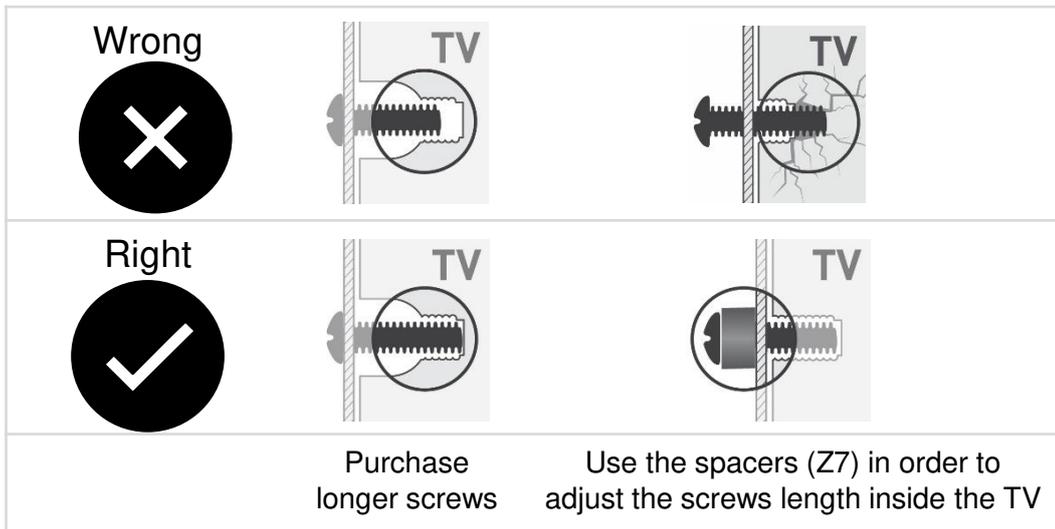


1

 Continue according to your TV mounting hole pattern

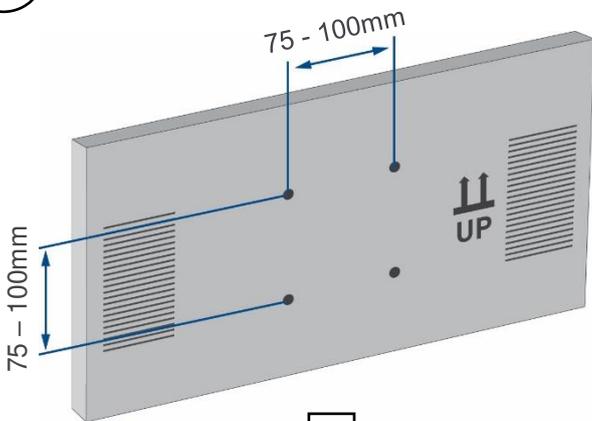



1a

 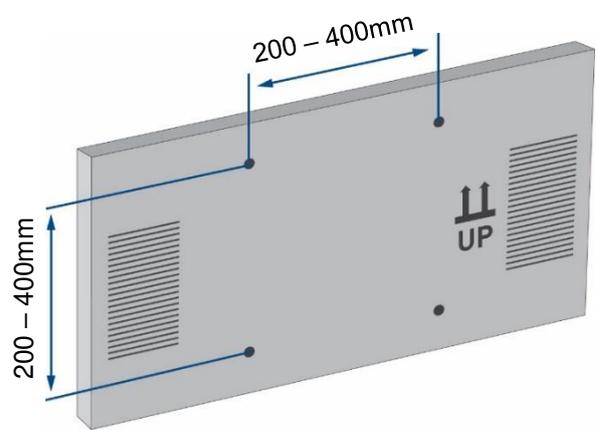

1b

1a

 
75x75 mm – 100X100 mm hole pattern

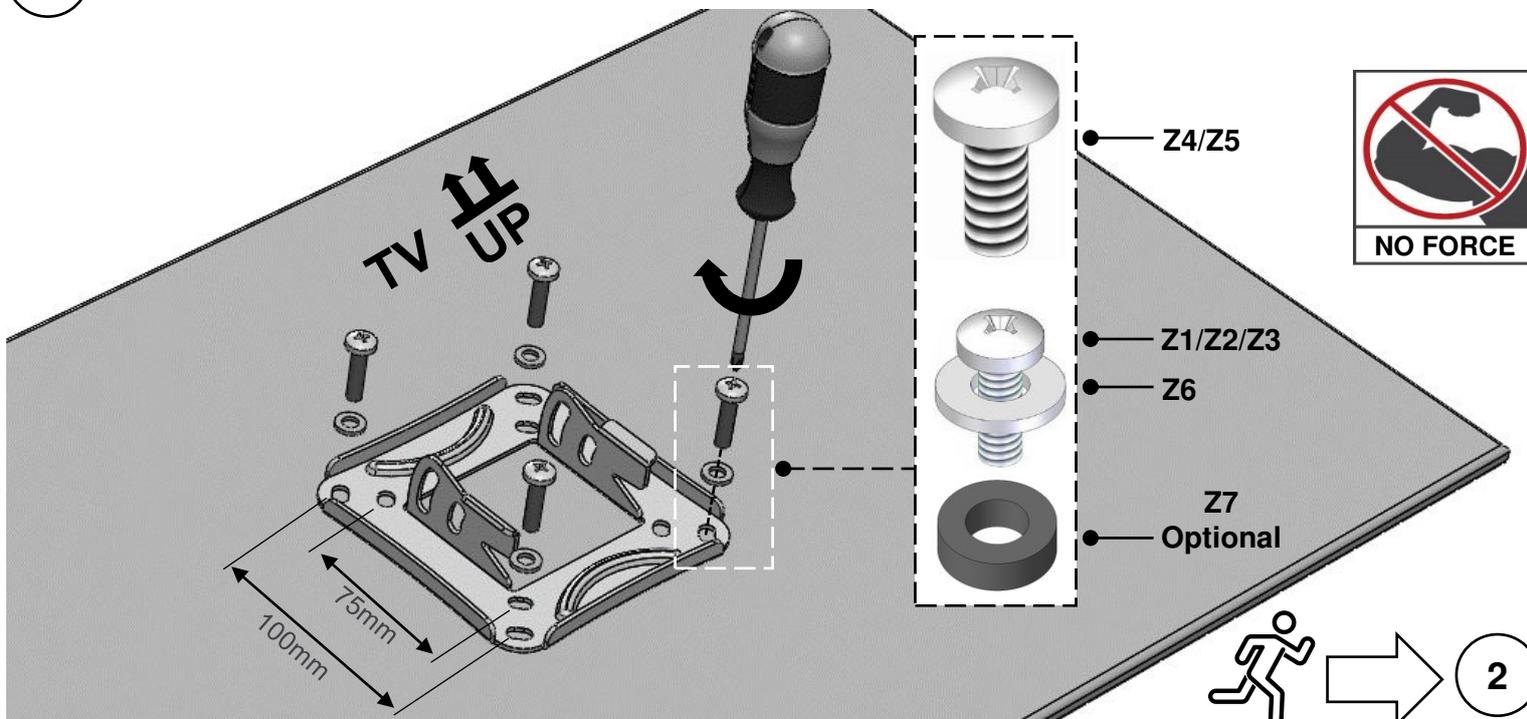







2

1b Hole pattern 100x200 mm up to 400x400 mm:
 Disassemble the screws, connect the 4 Adaptors to the TV Plate and reassemble the screws.


A

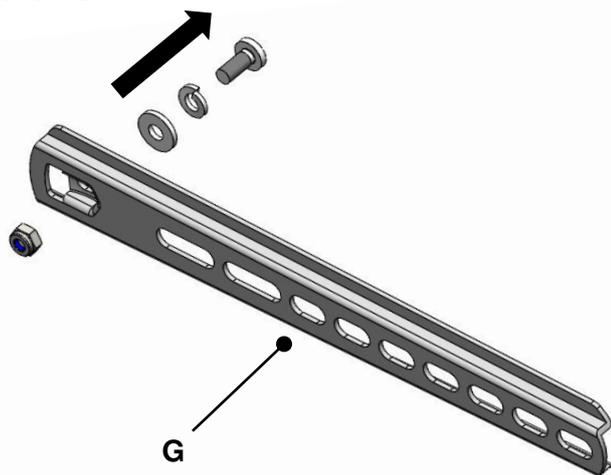

B

 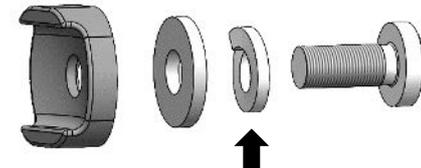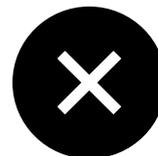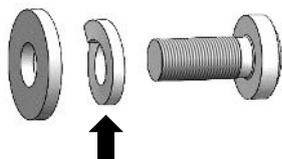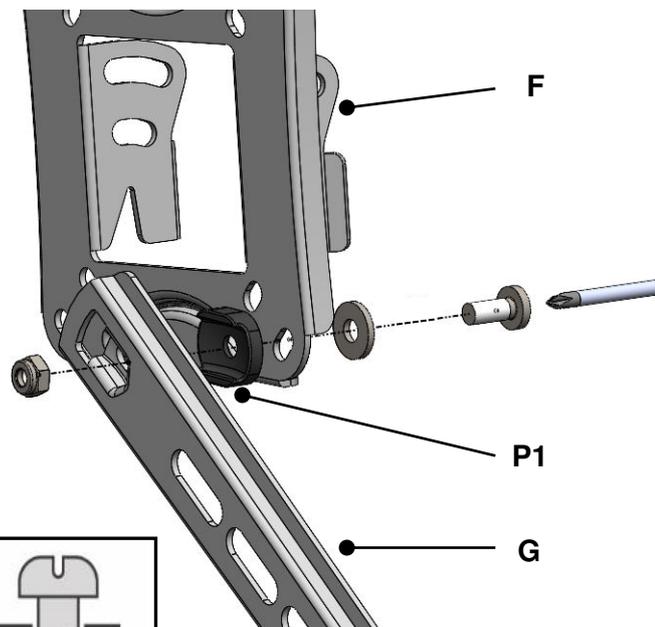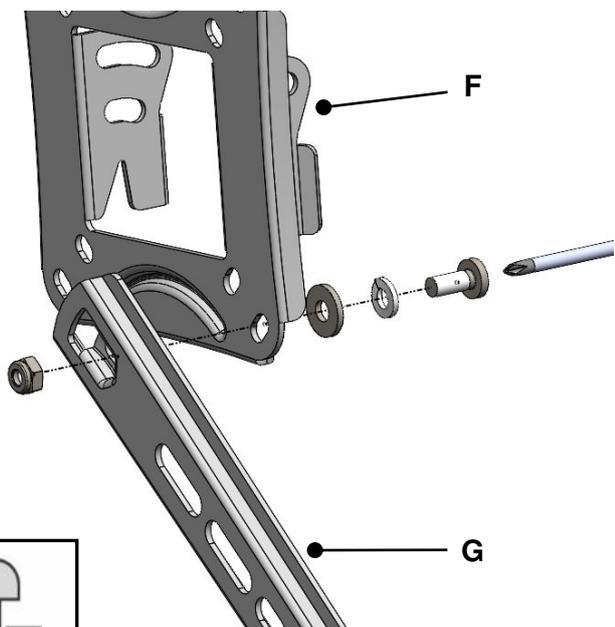


Position the Adaptors according to your TV's hole pattern.

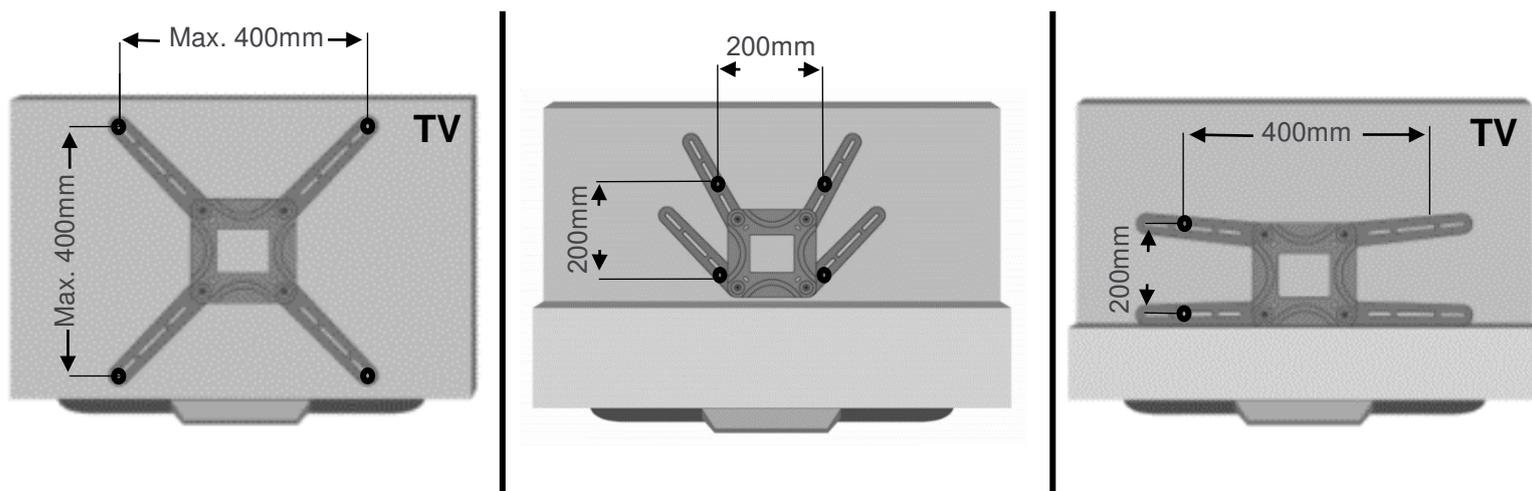




For more positioning options turn to the last page.

1c Connect the TV Plate with the Adaptors to the TV in all 4 connection holes.

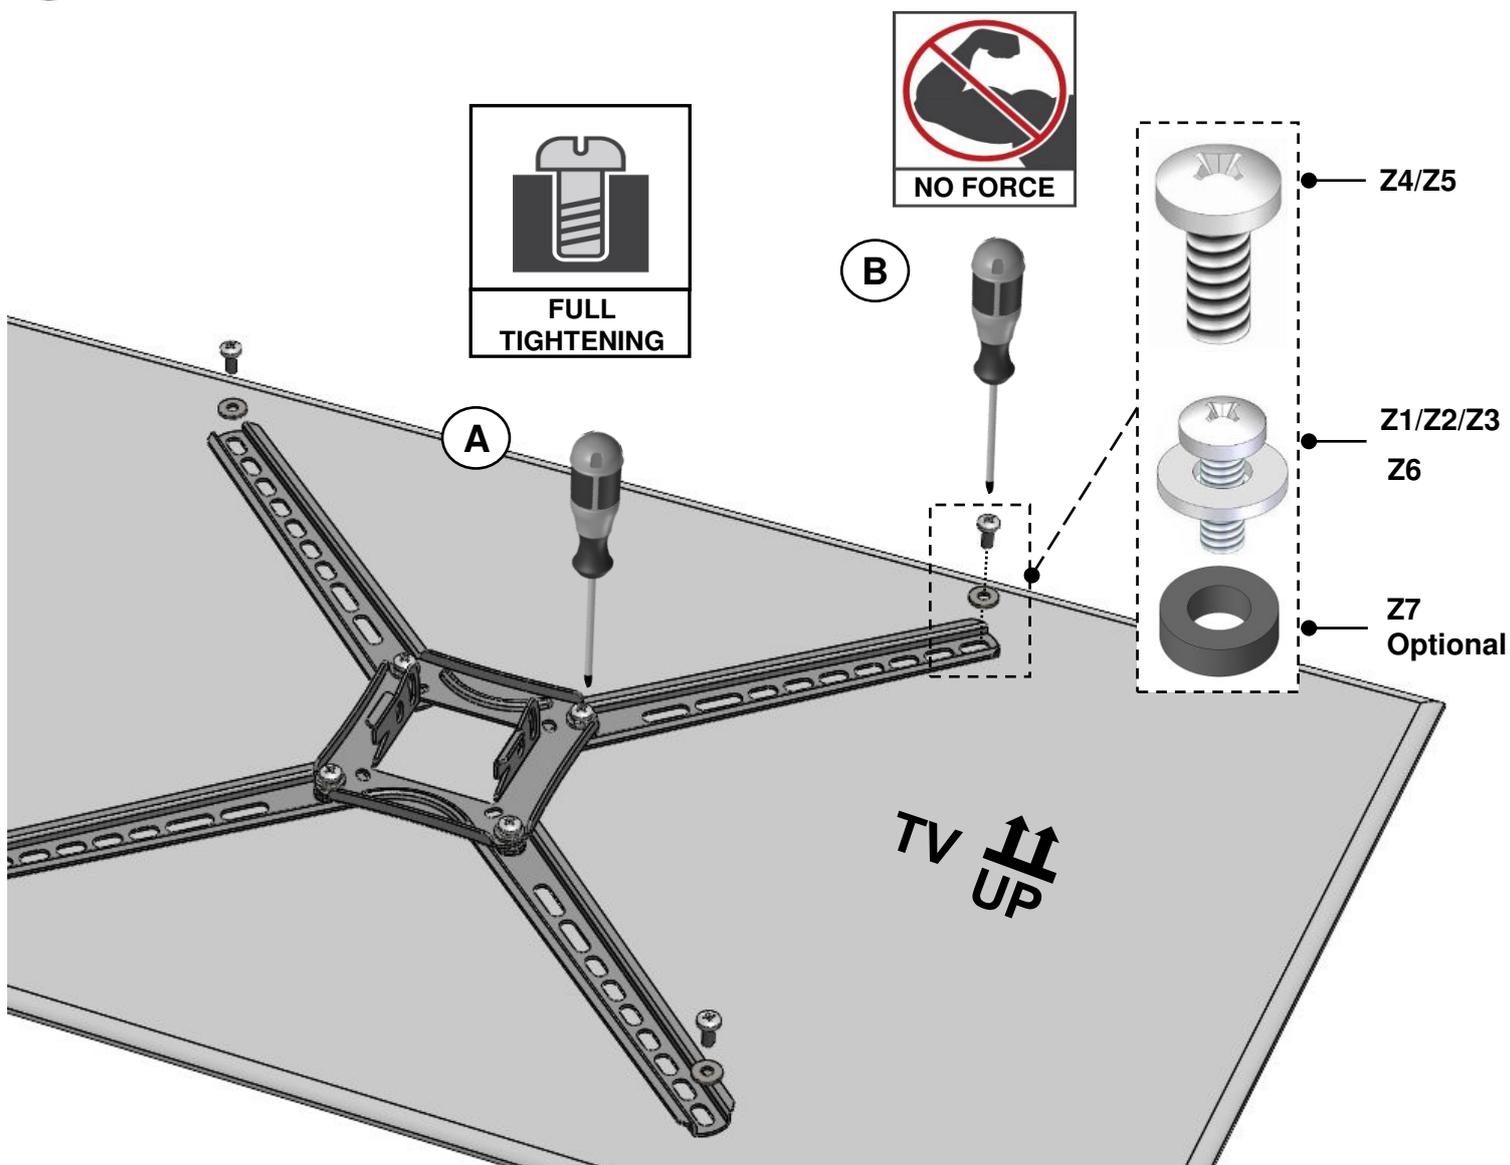


2


Follow the steps according to your ceiling type

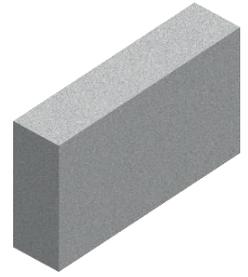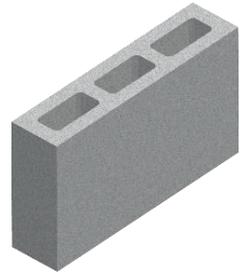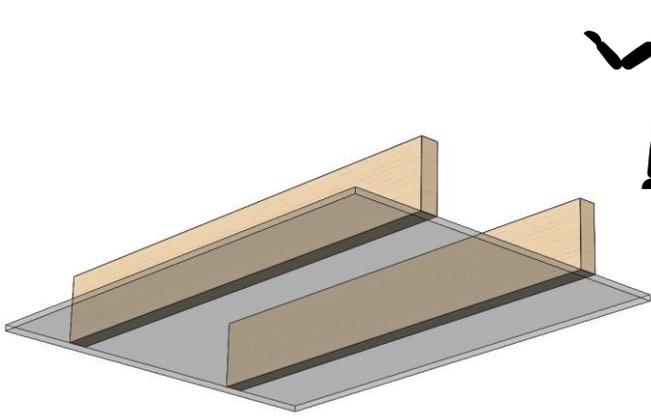



2a Make sure all holes are drilled inside the joist/ stud

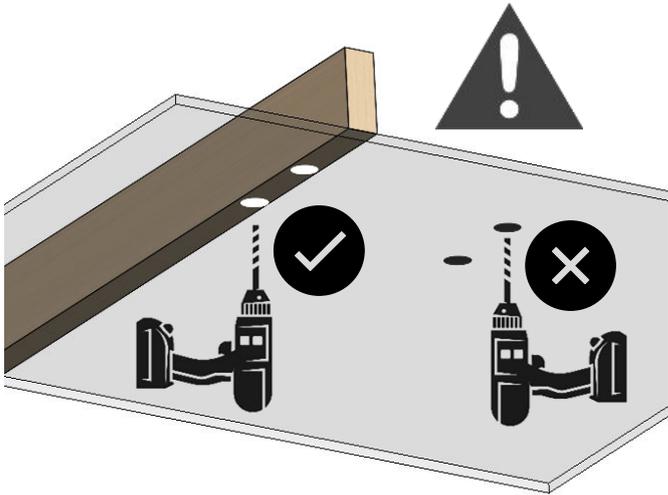


2b  Make sure there are no electrical/water lines in the ceiling before drilling and then drill according to the markings

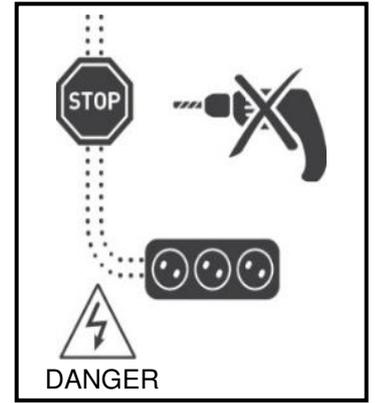






Mark the holes on the ceiling according to the required position

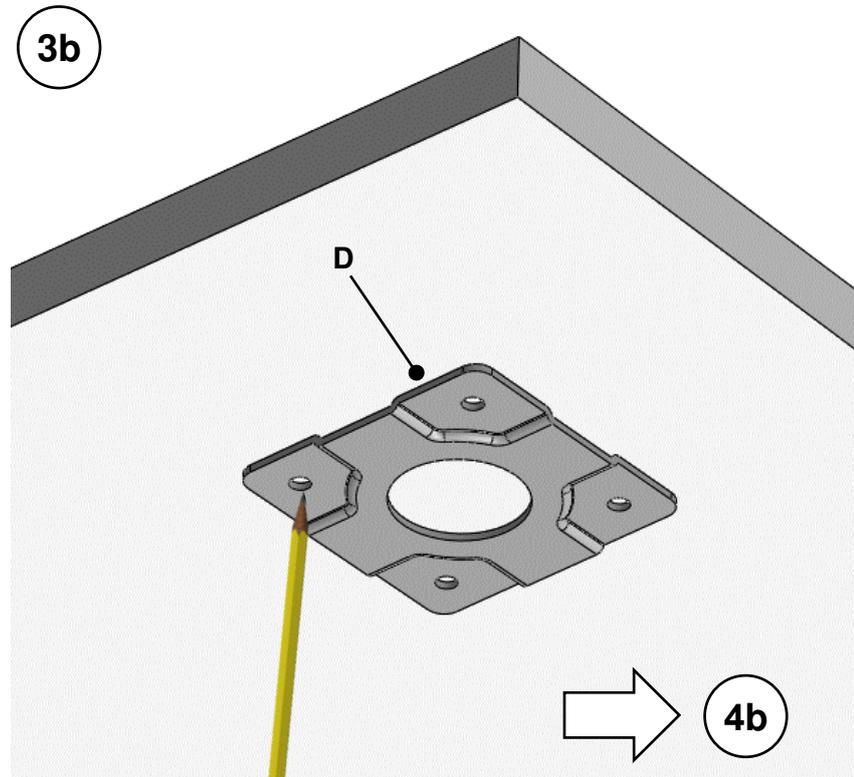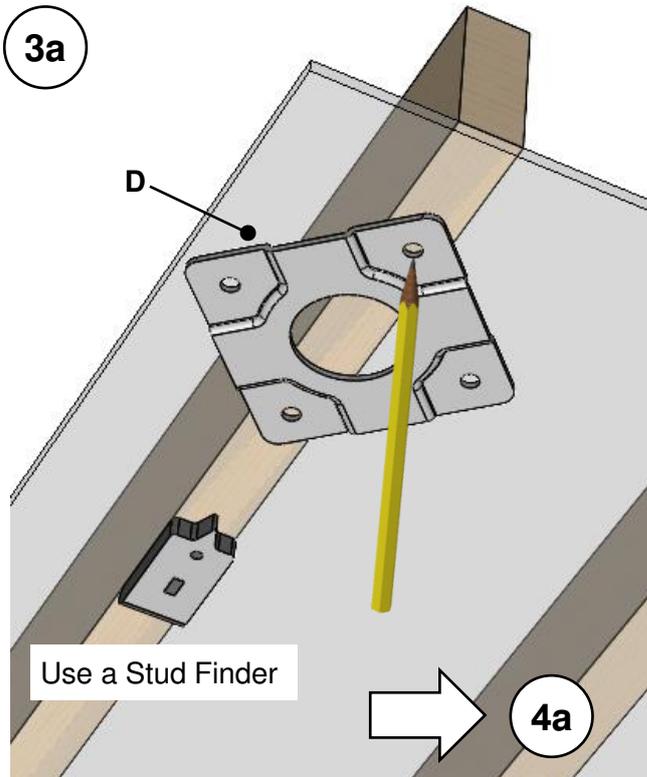


4a Drill with 5/32" \ 4mm drill bit

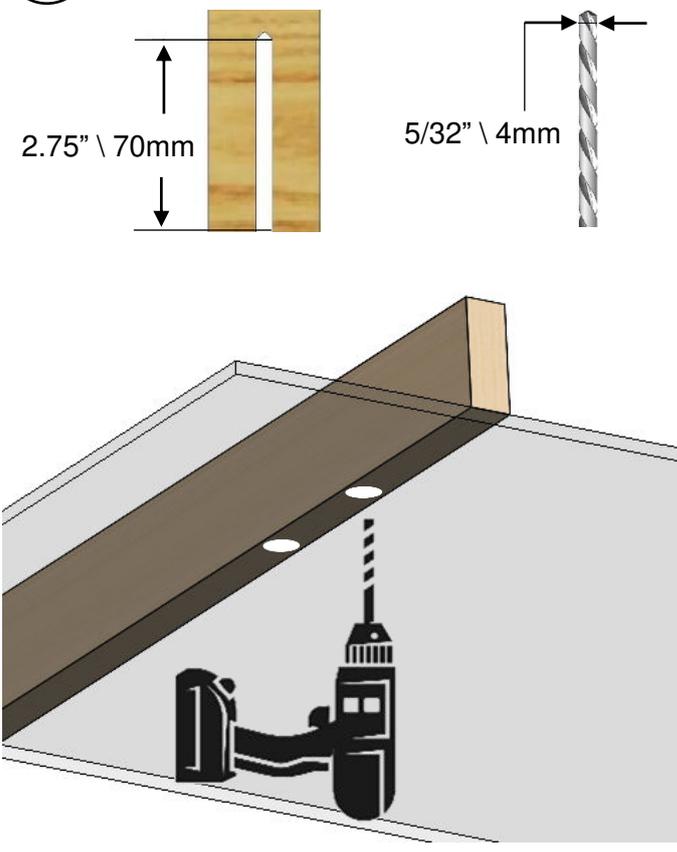


4b First use 1/4" \ 6mm drill bit

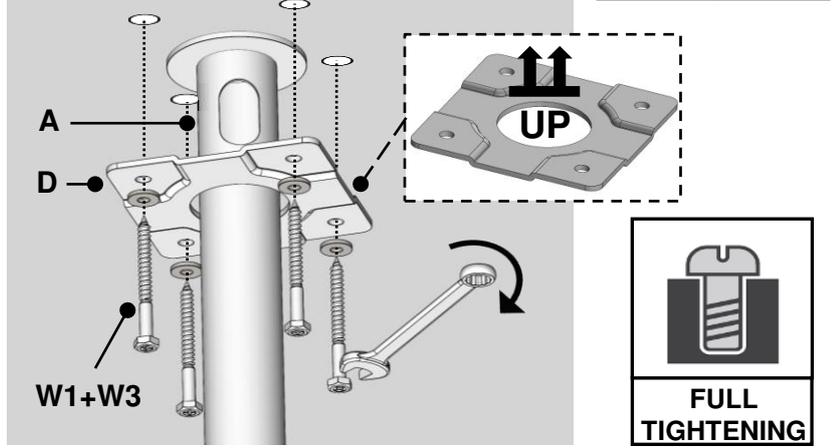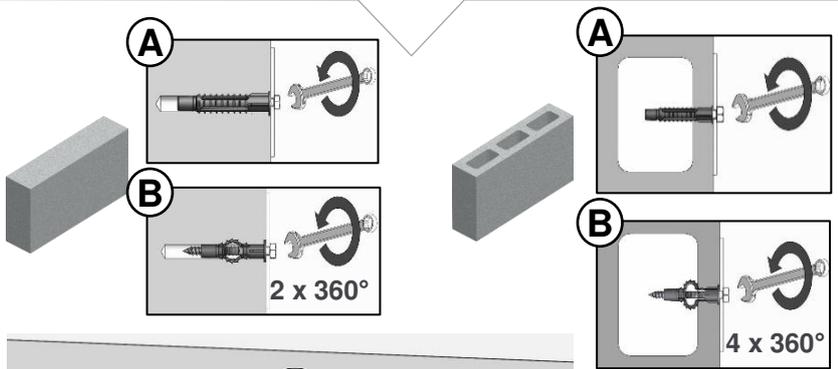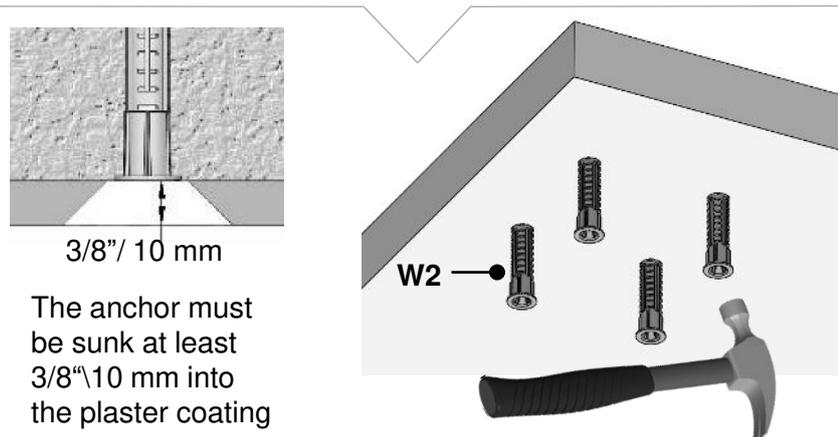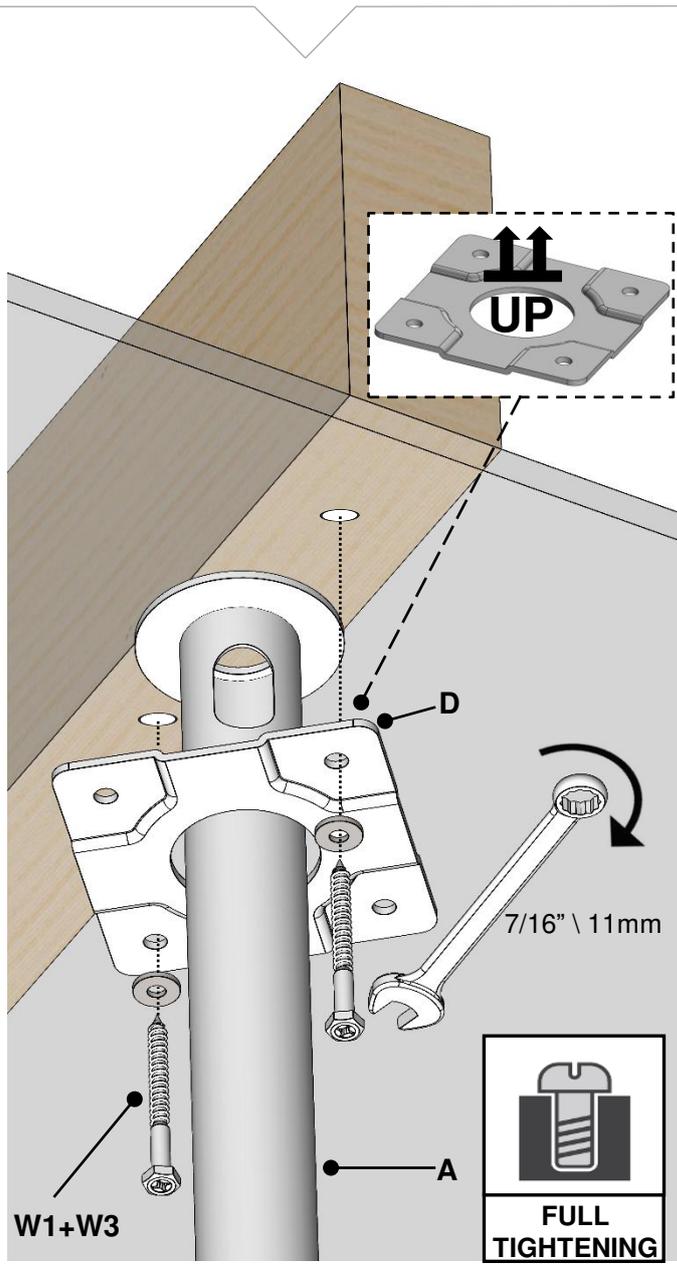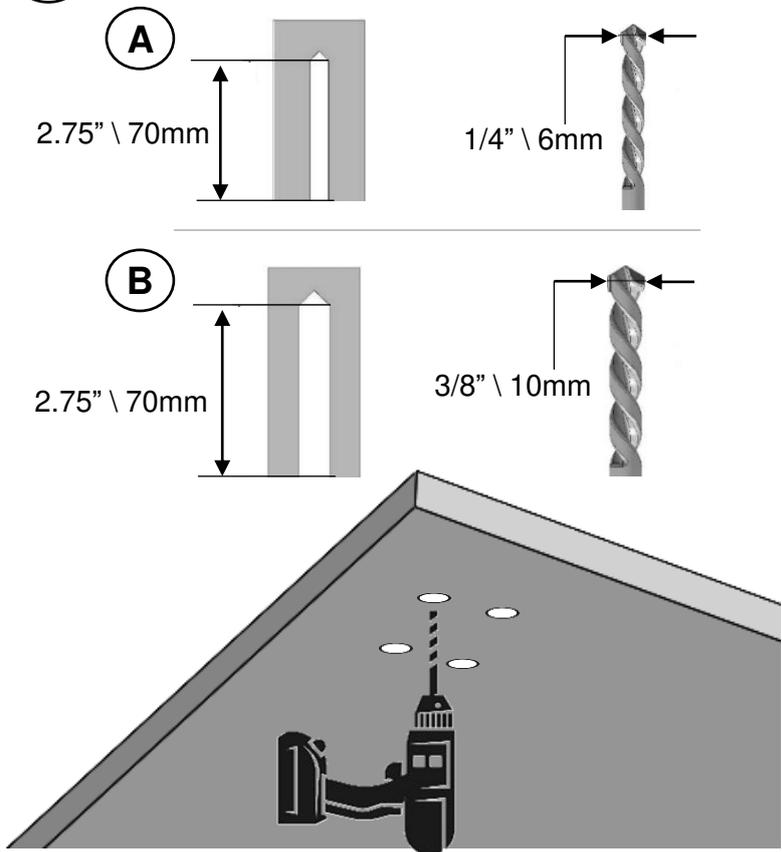

- 5** Weight test
Apply force on the upper pipe and make sure it is well connected

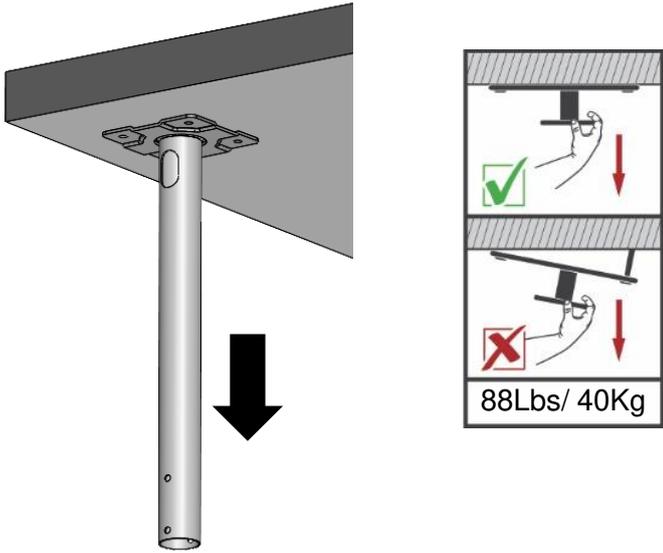

- 6** Assemble the ceiling plate plastic cover

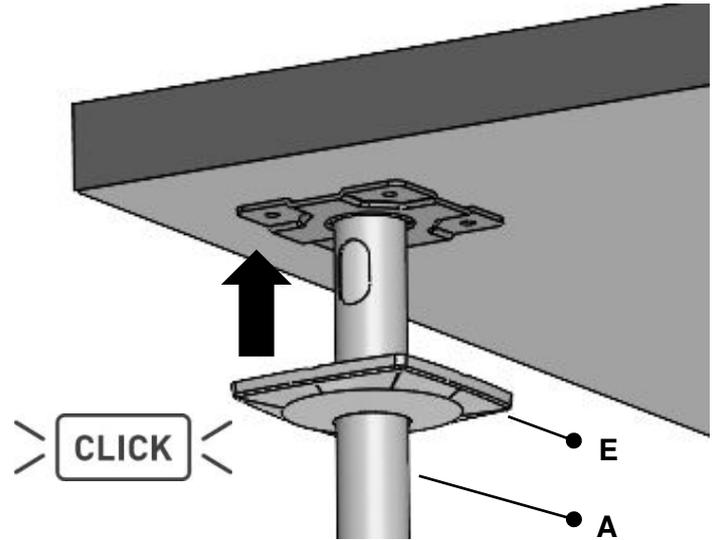


- 7** Connect the three tubes according to the desired length.
Each connection is made with two Y1 screws and Y2 nuts.
Important – You Must use all three tubes, you can't omit the middle tube B.
You may insert all the middle tube B into the upper tube A if needed.





A

5 optional height levels:

Level	Height (inch)	Height (cm)
1	16.1"	41
2	21"	53.3
3	27"	68.6
4	32"	81.2
5	38"	96.5


Minimum **Maximum**

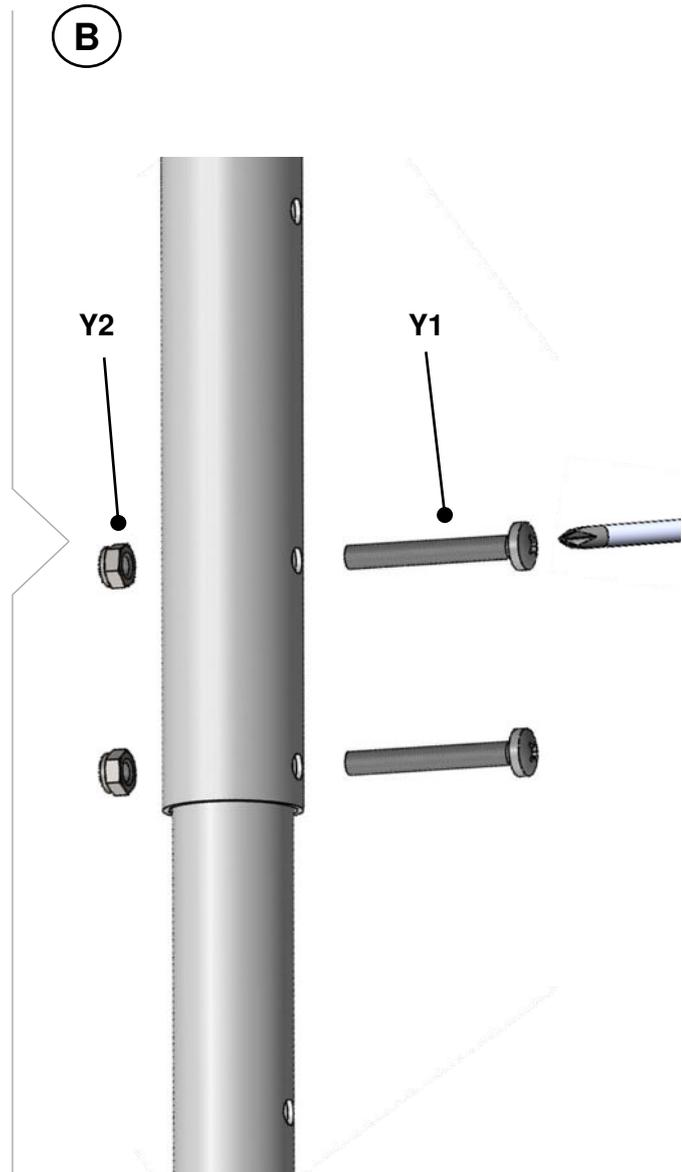

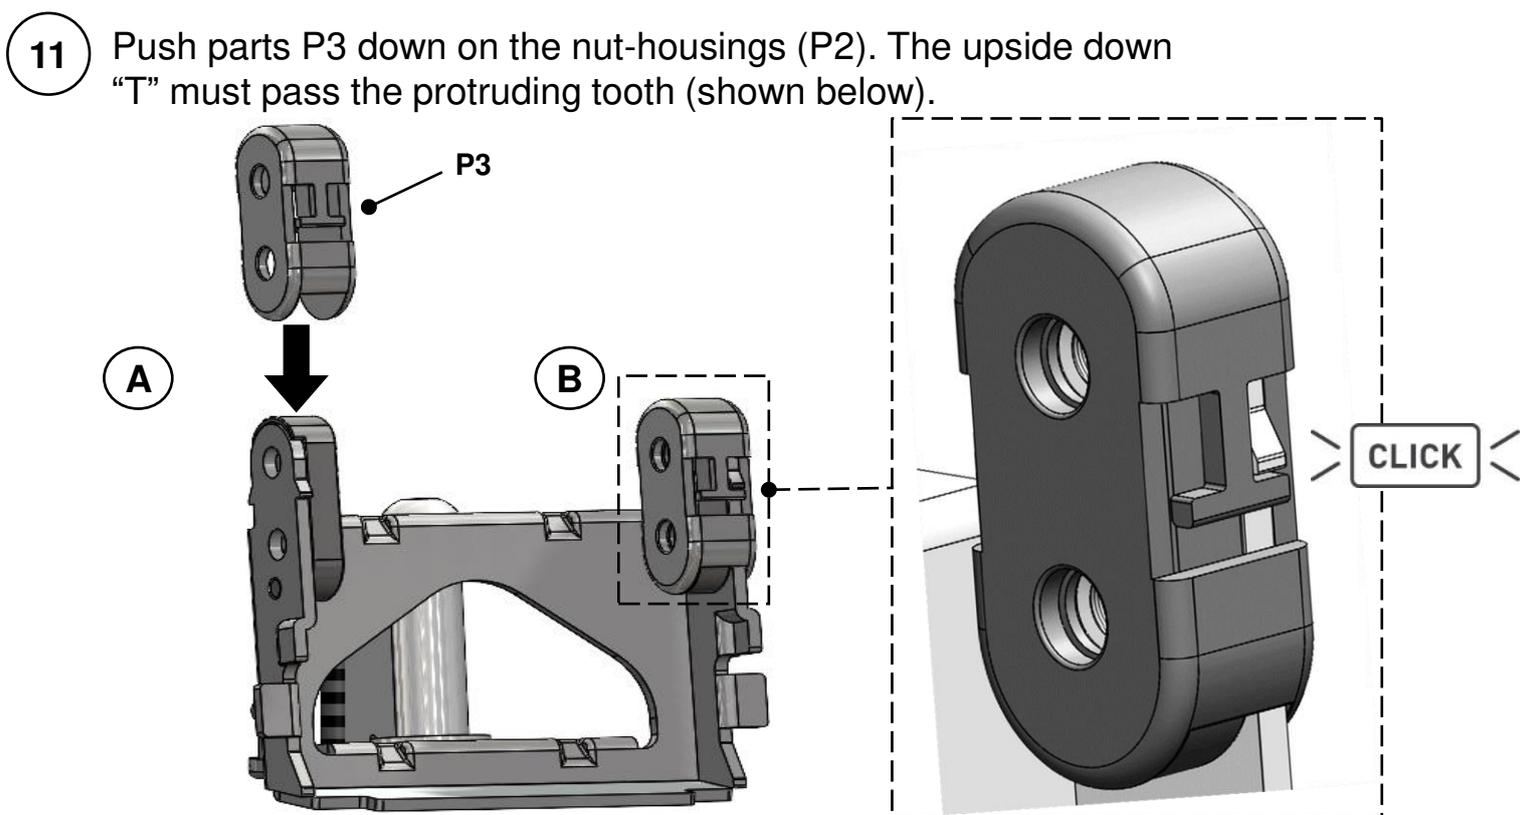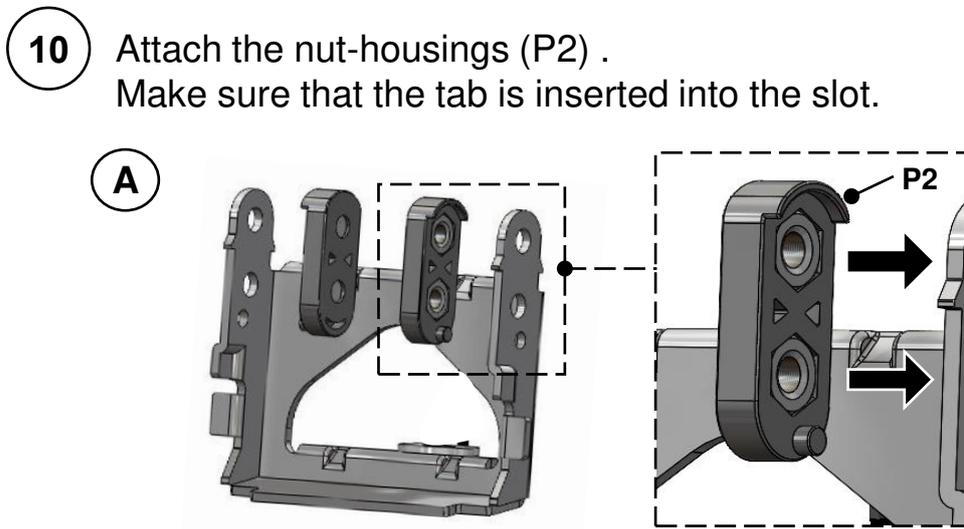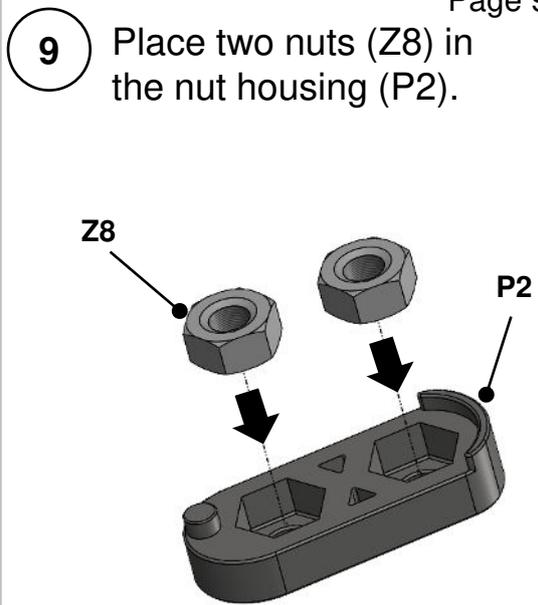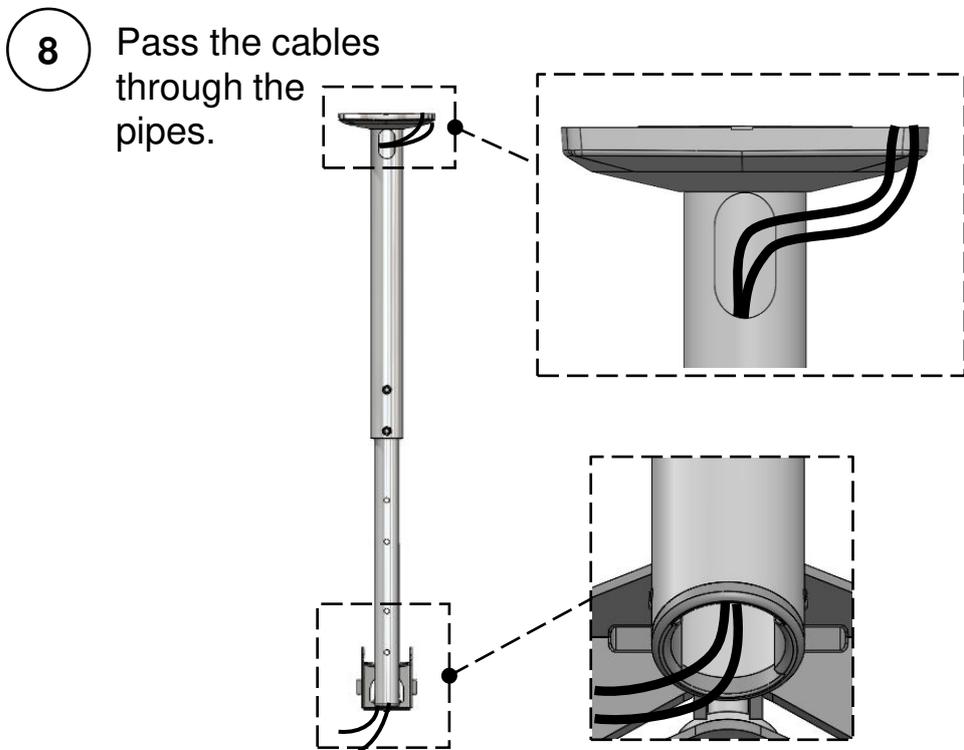


12a

Connect the TV with the TV plate to the bracket

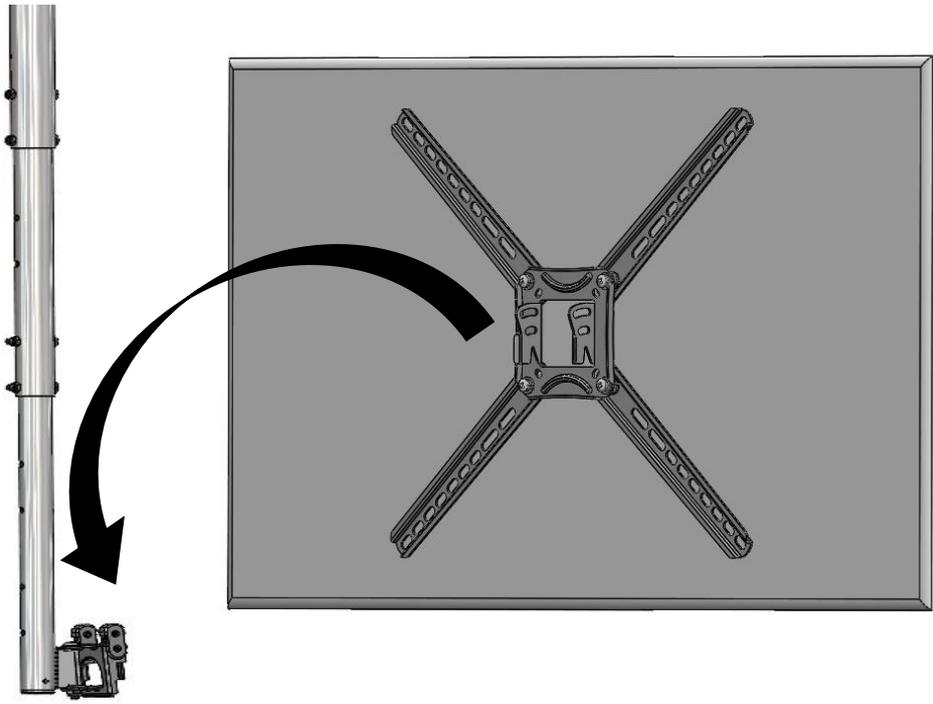



12b

Insert and tighten the screws from both sides to create friction for the tilt mechanism. Adjust the TV tilt angle carefully.


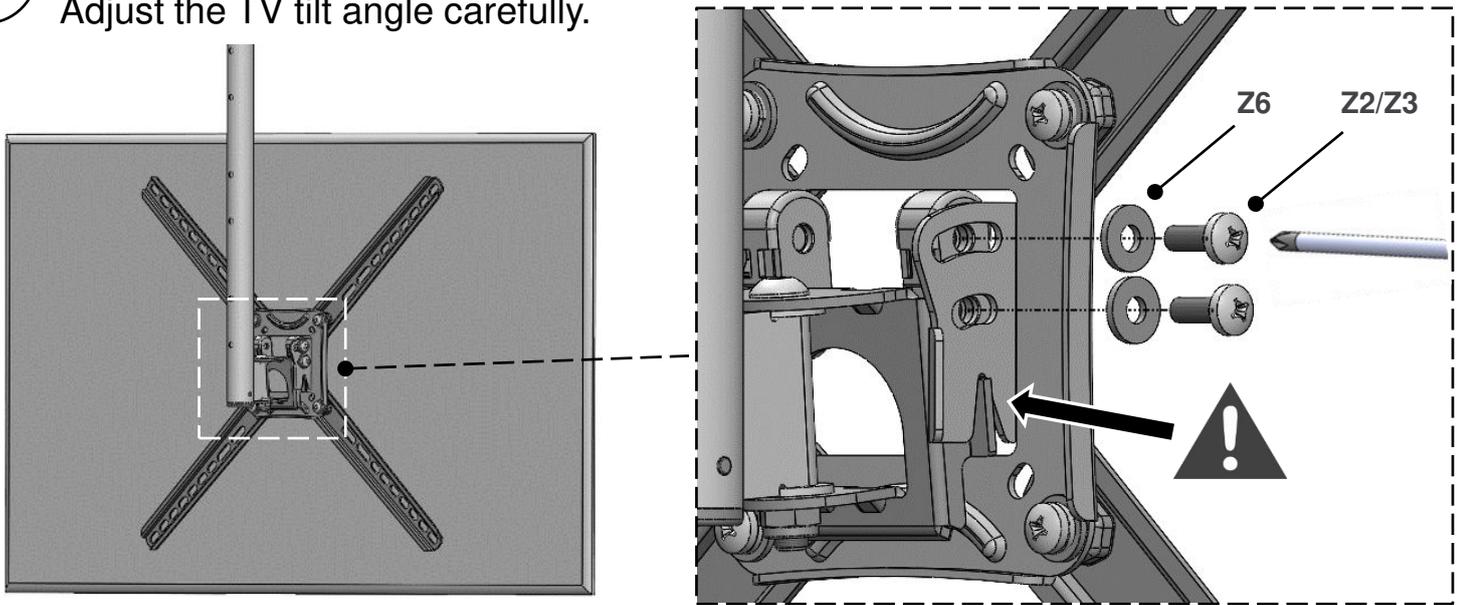


13

Level the TV.

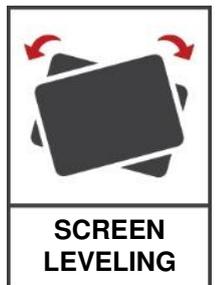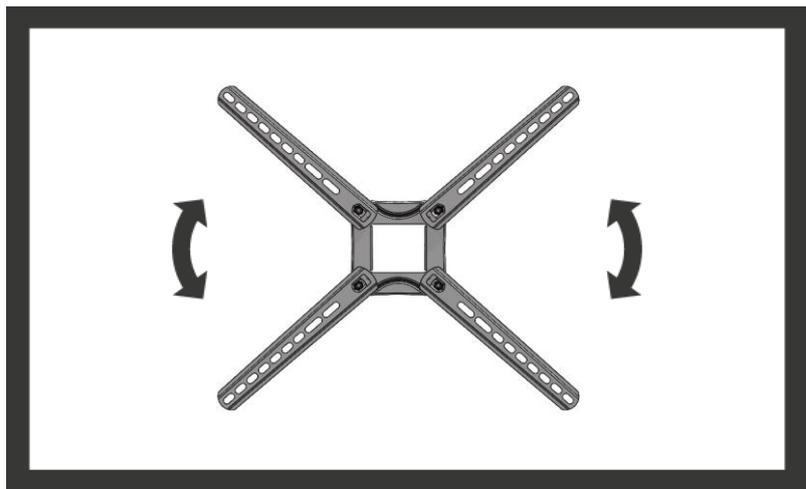

Disconnect the TV, remove the screws and lift the TV

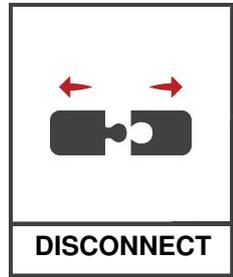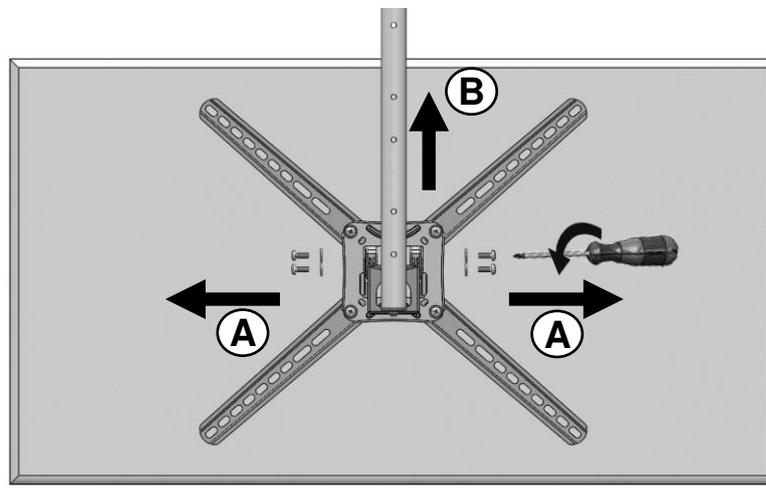

BACKSCREEN CONNECTION POSITIONING OPTIONS

All TV backscreen connections are in millimeters (Width x Height).

There are a few sizes of TV plates available.

The backscreen connections in position 1 are included in some of the different TV plates, according to their size, and do not require the use of the 4 adapters (marked in blue).

1 75x75, 100x100, 100x200, 200x100, 200x200

2 200x100, 300x200, 400x200, 600x200

3 200x100, 300x200, 300x300, 400x200, 400x300, 600x200, 600x300

4 100x100, 200x200, 300x300
*Less stable than option 5

5 100x100, 200x200, 300x300

6 100x200, 200x300

7 100x100, 200x200, 300x300, 300x400, 400x400, 600x400

8 200x100, 300x200, 400x200, 400x300, 600x400

If your backscreen connections are not included in any of the positions, please contact us

www.barkanmounts.com/support

