 
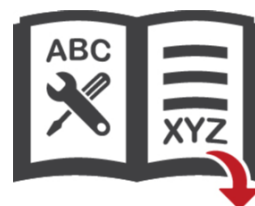 



TV Wall Mount

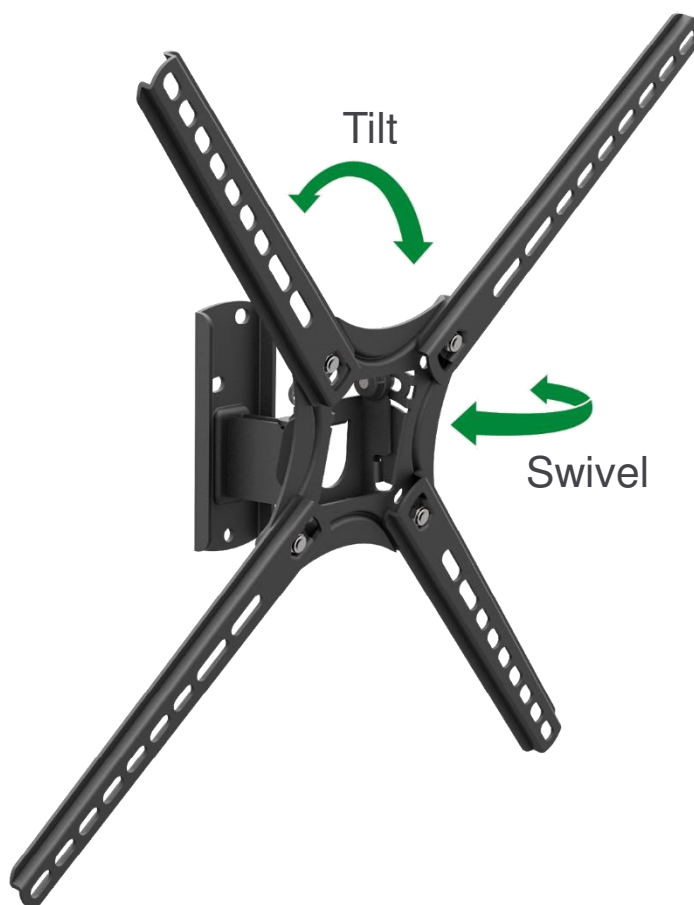

 Download Assembly Instructions with Text

 

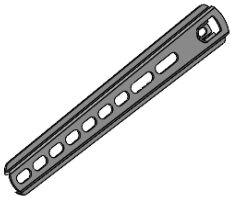 



 

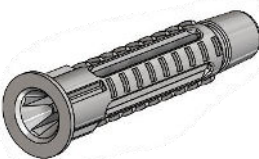 

For more information: **barkanmounts.com**

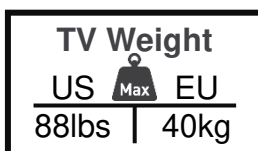If you are satisfied with the product, please give us a 5 stars ★★★★★ rating on the website you bought it from. If you are not satisfied please contact us at <https://www.barkanmounts.com/support> and we will solve the problem for you.



**Safety instructions and installation warnings (provided separately)
must be read in full, prior to assembly.**


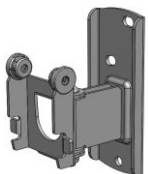
Included Parts not to scale

A  x1	B  x1	C  x4	
Z6  x6	Z7  x4	Z8  x2	Z9  x2
Z10  x4	W1  x3	W2  x3	W3  x3




#	M	L mm	L inch	pcs
Z1	4	20	3/4	4
Z2	6	16	5/8	4
Z3	6	25	1	4
Z4	8	25	1	4
Z5	8	45	1 3/4	4

  Required Tools

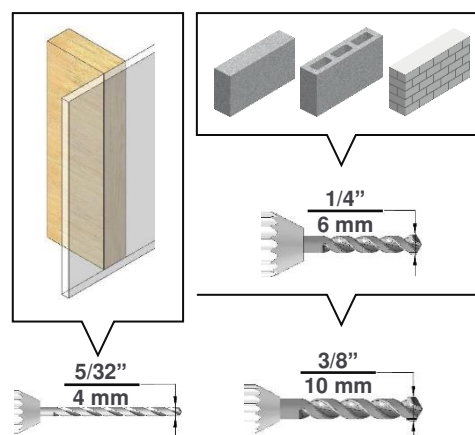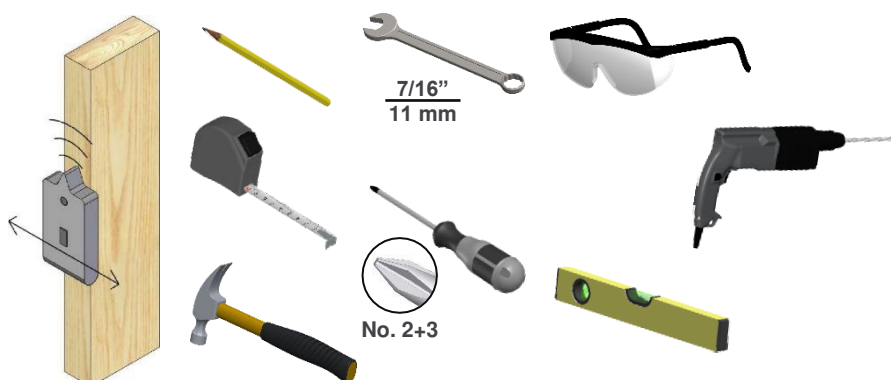


1

 Connect TV plate (part B) to the back of the TV.

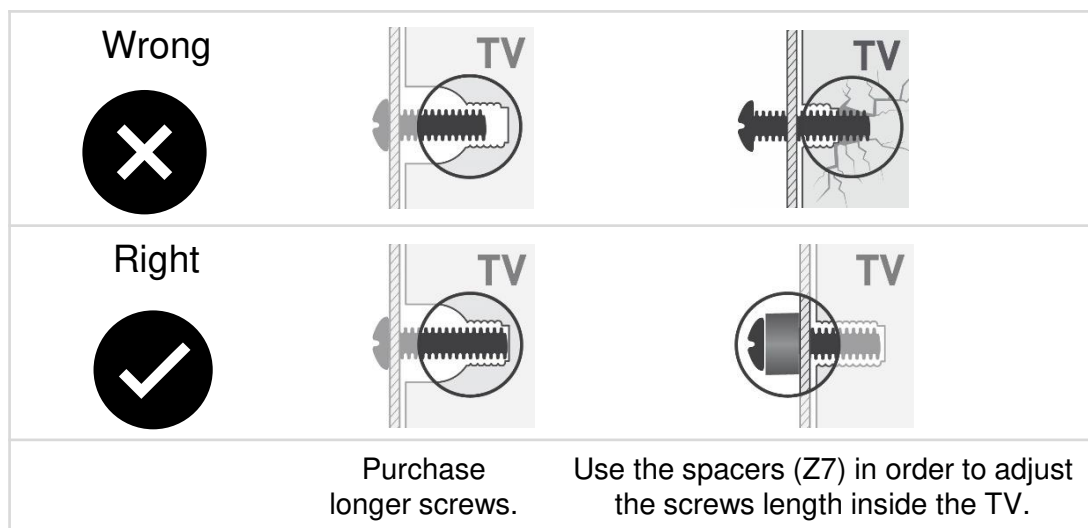


Continue according to your TV mounting hole pattern.

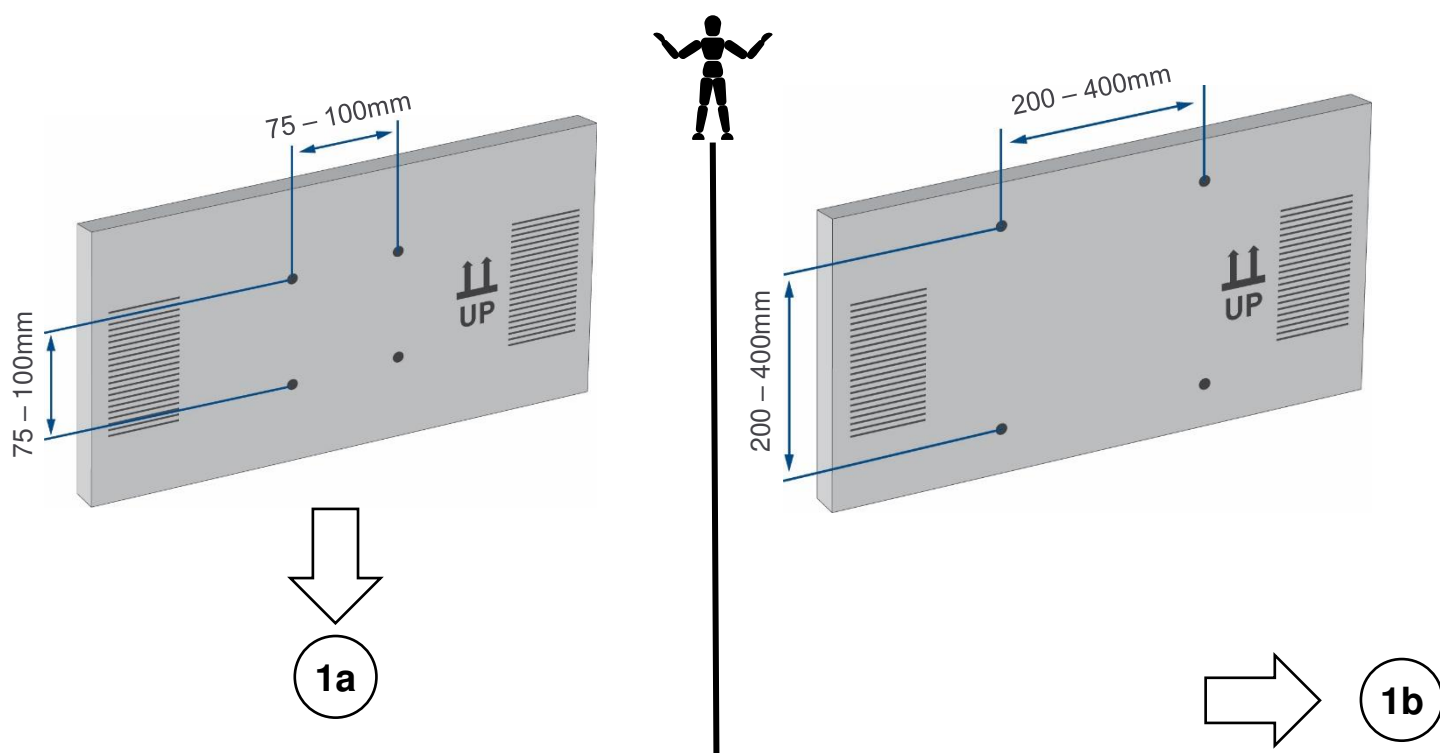

1a


75x75 mm up to 100x100 mm hole pattern.

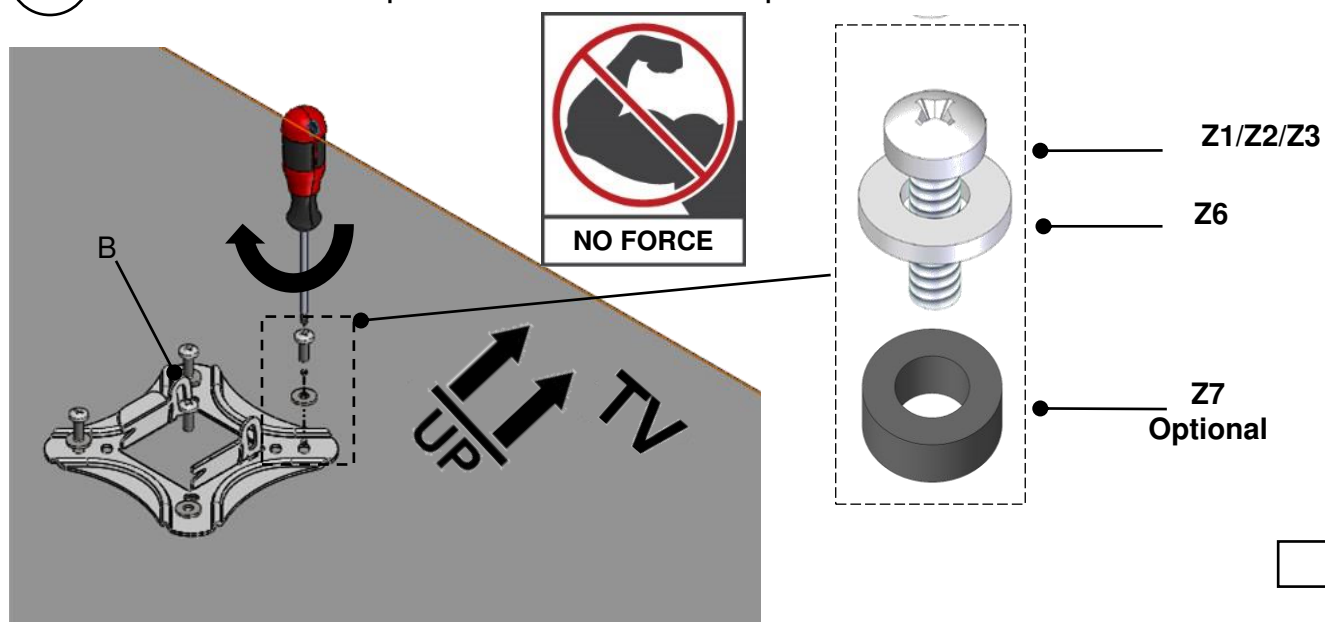


2

1b**Hole pattern 100x200 mm up to 400x400 mm:**



Disassemble the screws, connect the 4 Adaptors to the TV Plate and reassemble the screws.

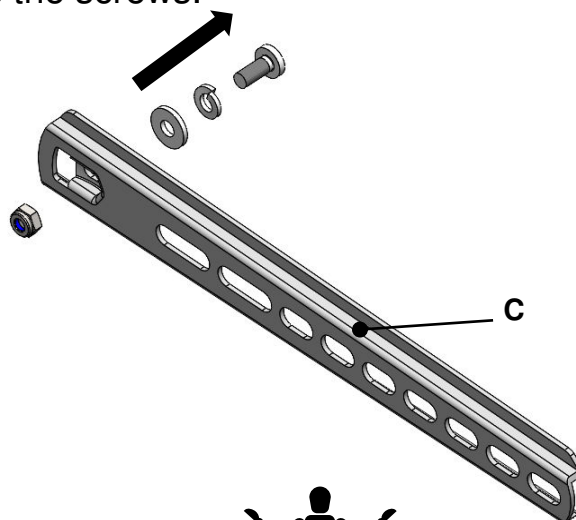I**II**





Flat TV

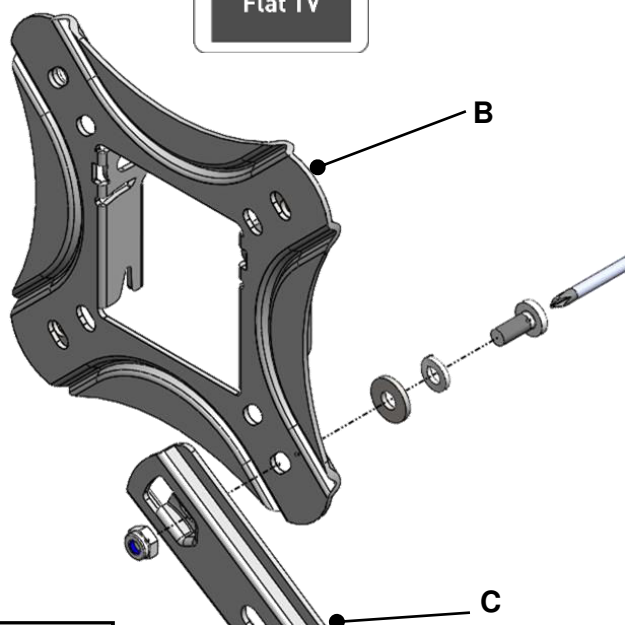


Curved TV

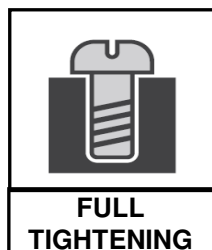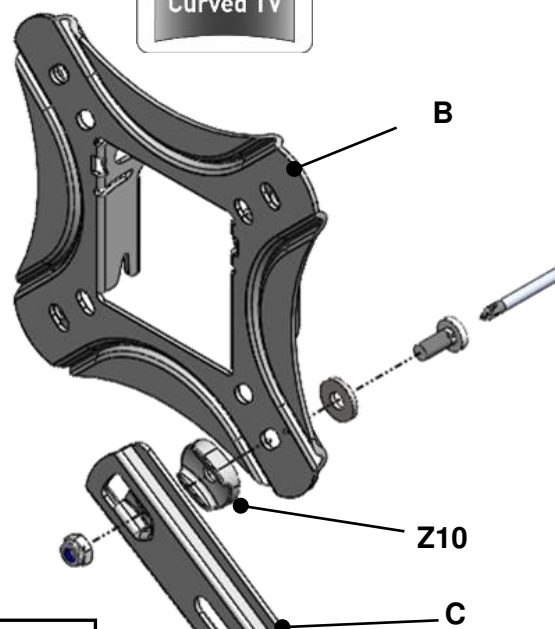

Z10

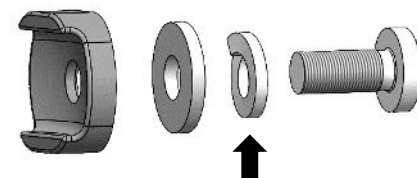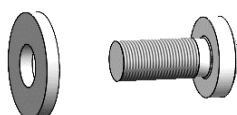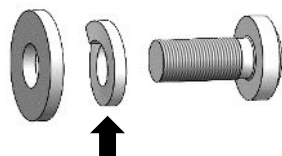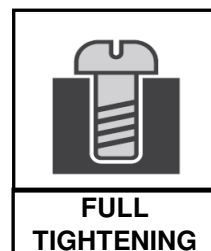


Position the Adaptors according to your TV's hole pattern.

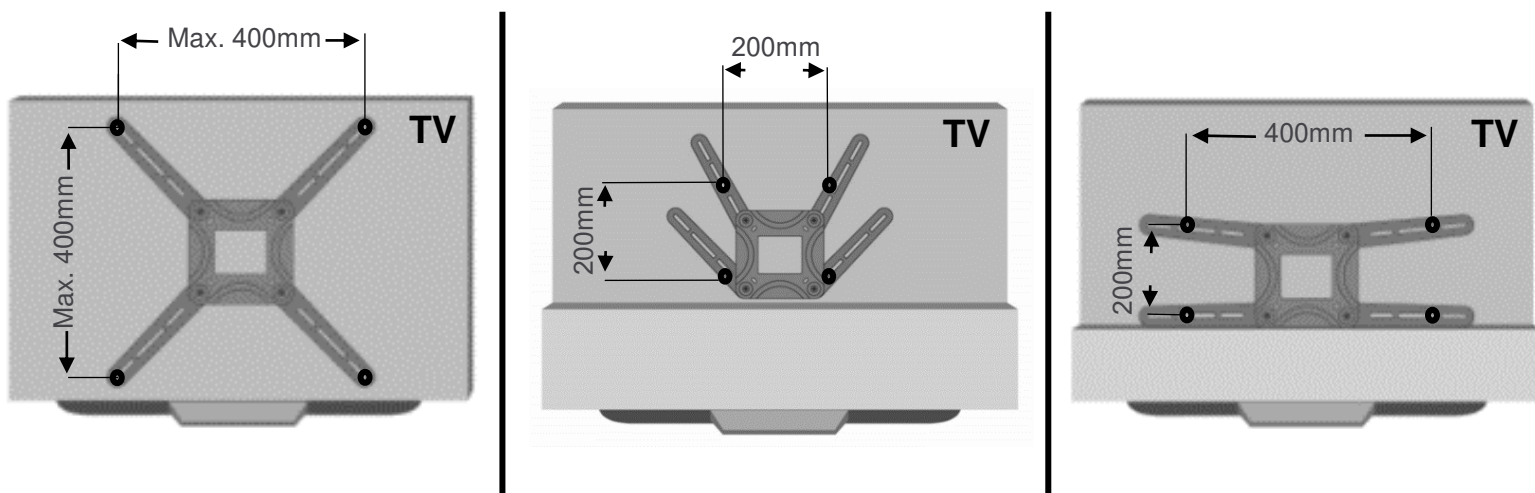

For more positioning options refer to the last page.

2


Connect the TV Plate (B) with the Adaptors (C) to the TV in all 4 connection holes.

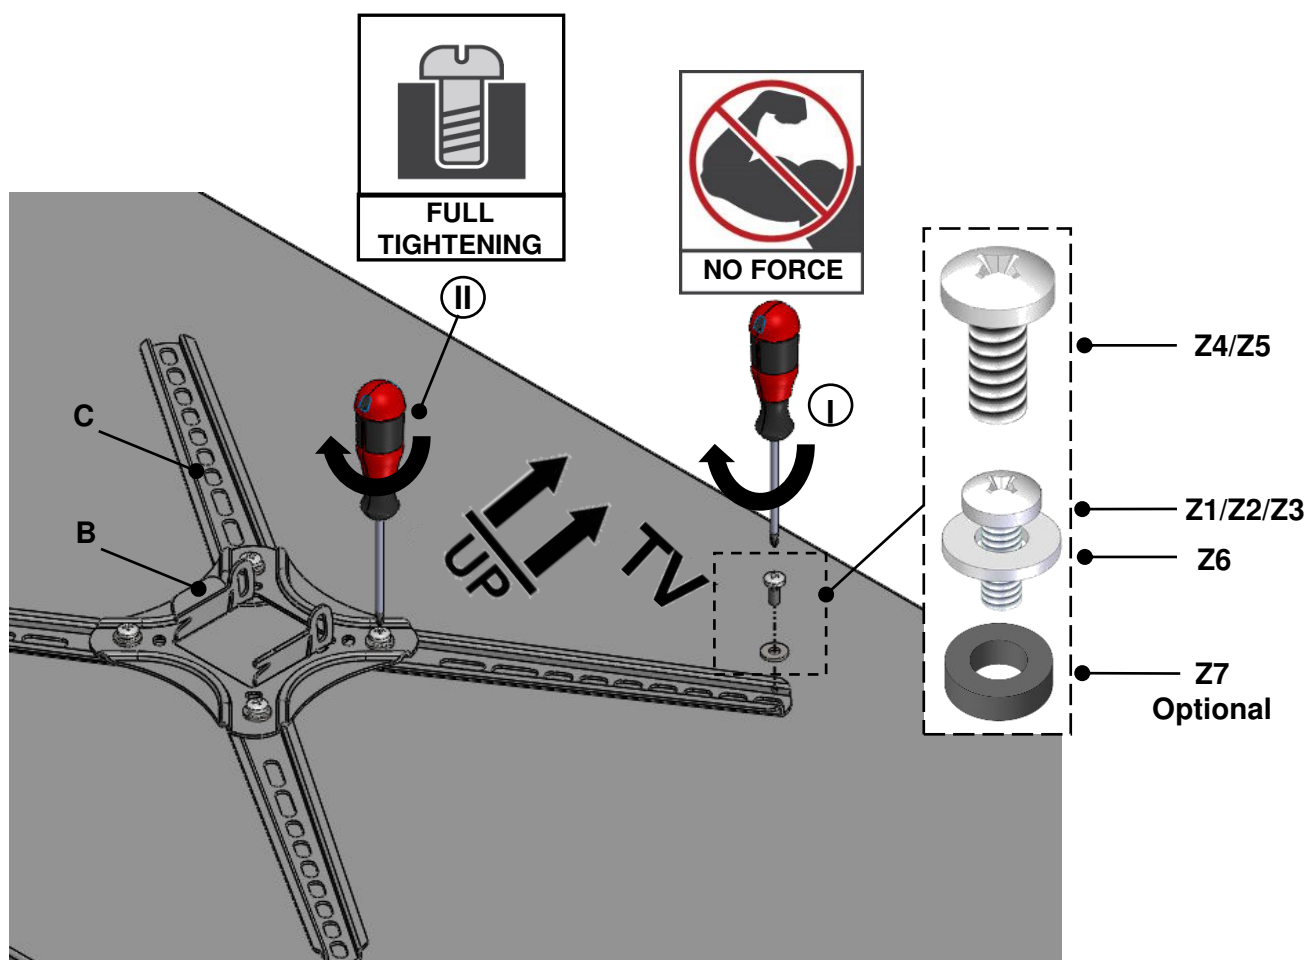

Install the Bracket on the Wall.


3

Measure the distance between the location of the TV's mounting hole's center and the bottom of the TV, in order to set the required placement of the TV.


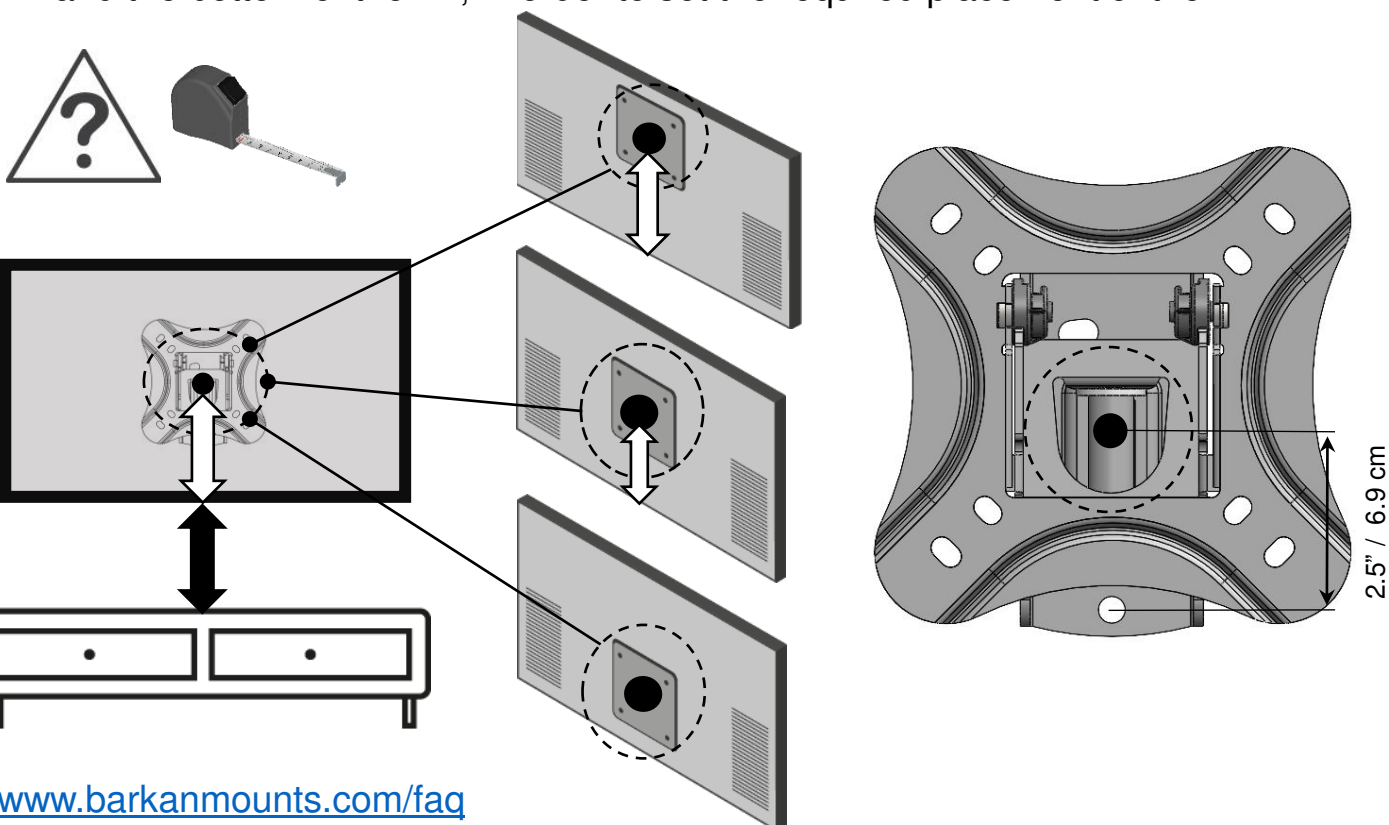


<https://www.barkanmounts.com/faq>

4

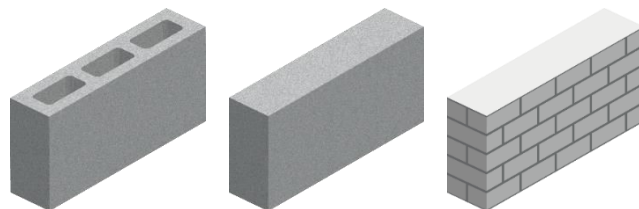



5

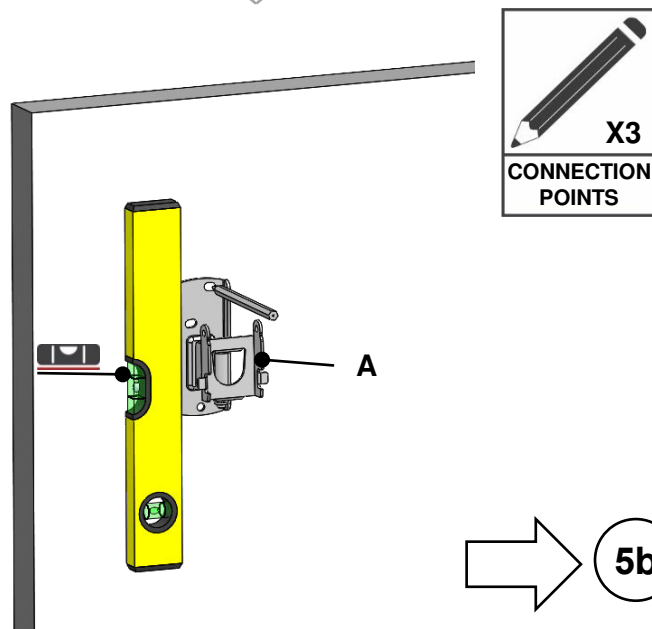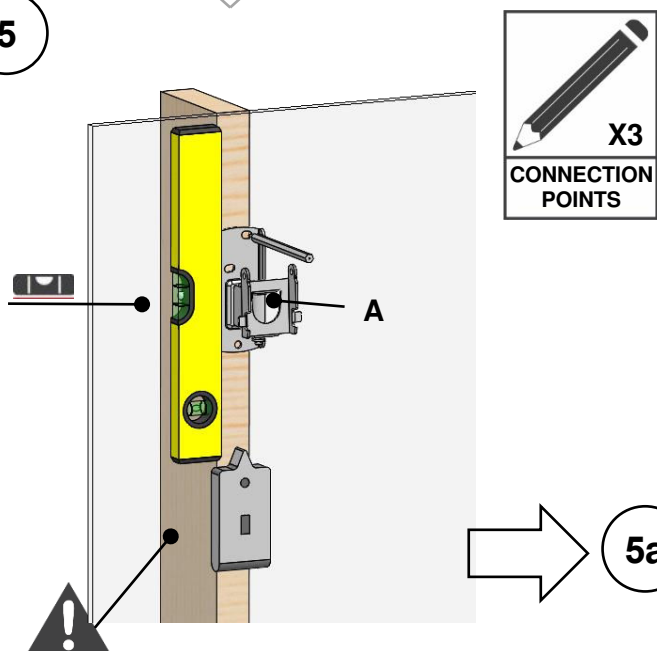  

6


Weight test

Apply force on the upper part of the Bracket (A) and make sure it is well connected.

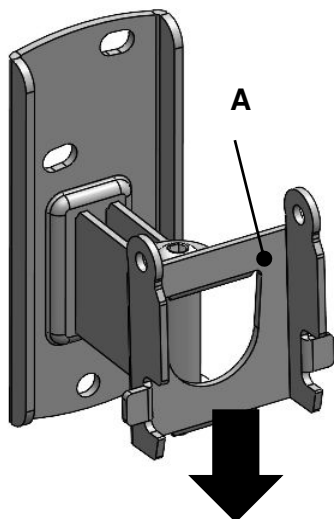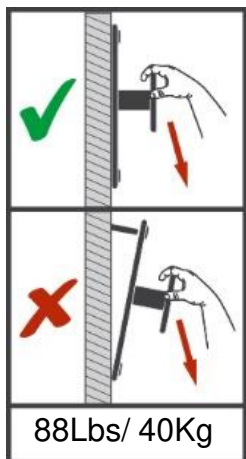



7

Place two nuts in the plastic nut-housings.

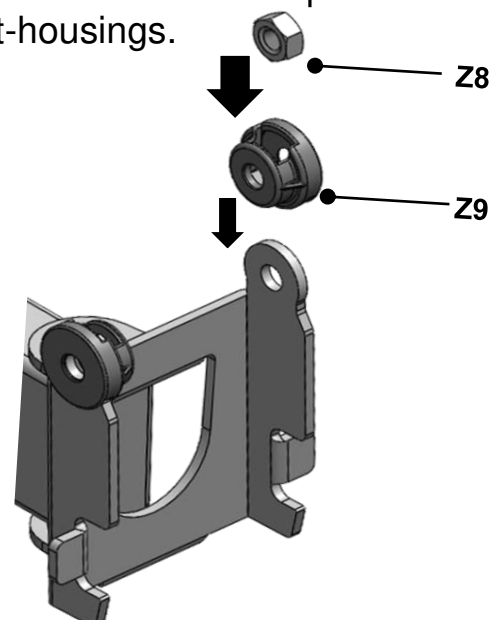


8

Connect the TV with the TV Plate (B) to the Bracket (A).

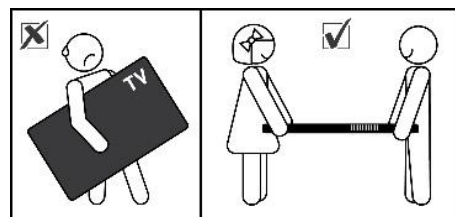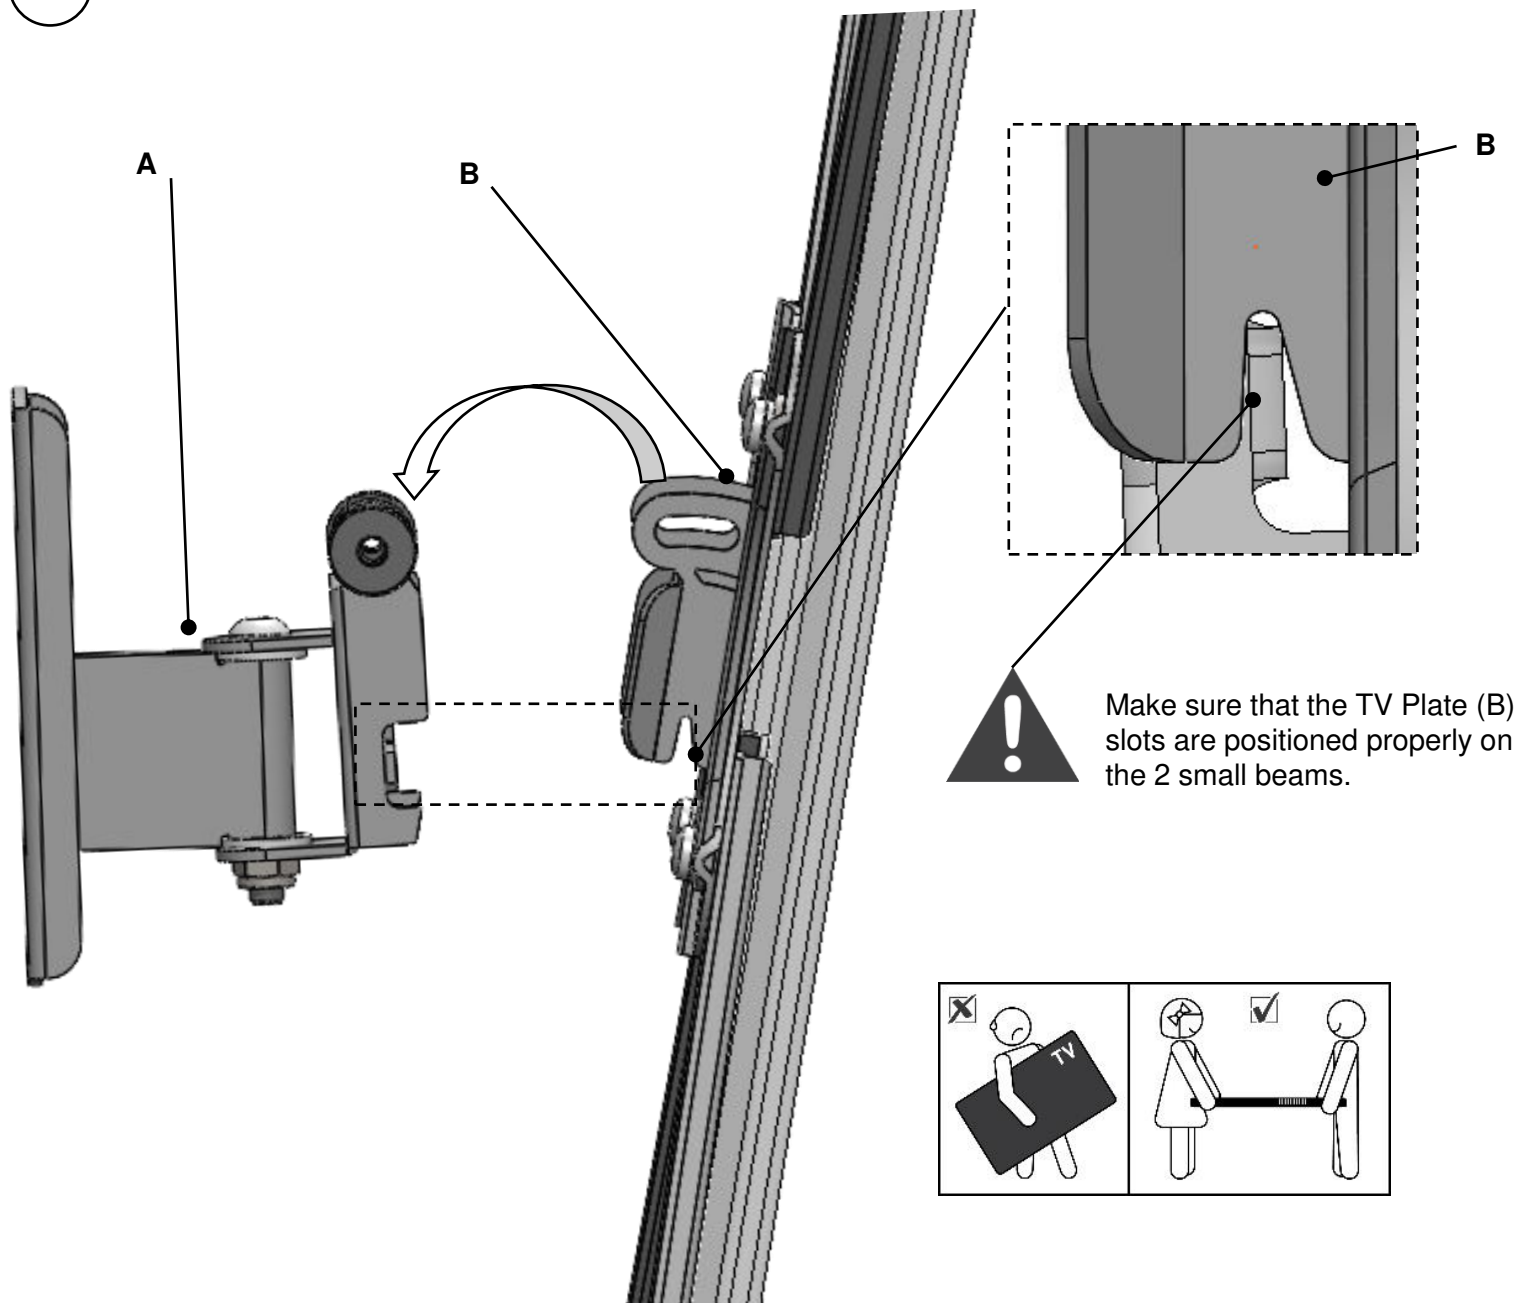


9

Insert and tighten the screws from both sides to create friction for the tilt mechanism. Adjust the TV tilt angle carefully.

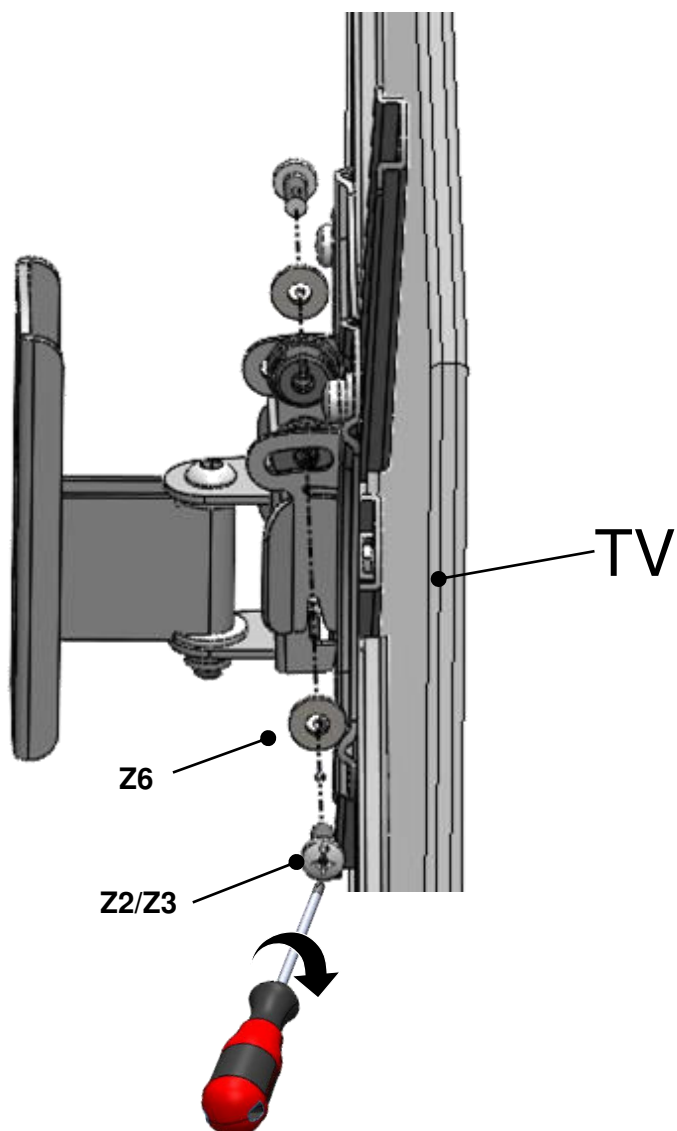


10

Be careful when you move the TV by the screen.


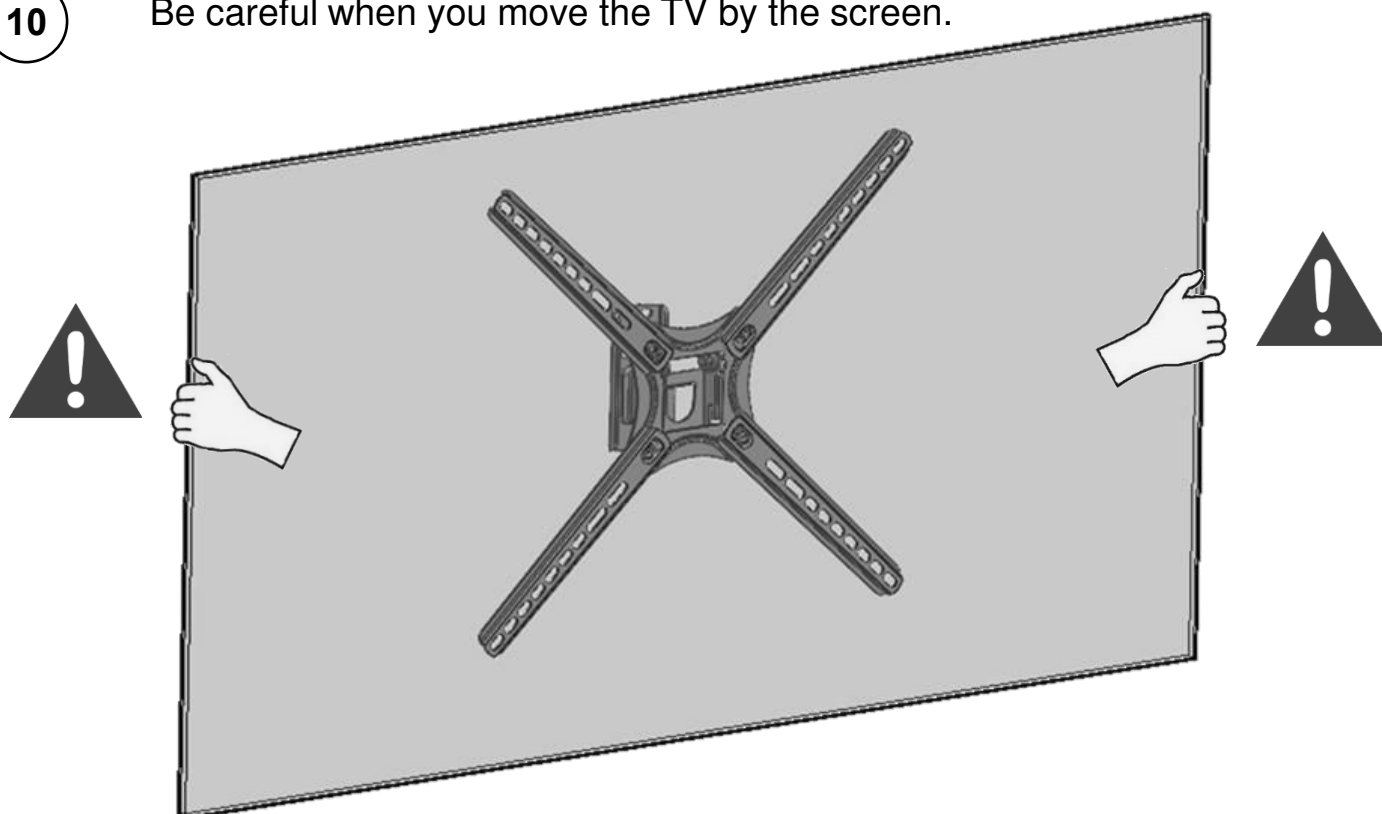


11

Level the TV.

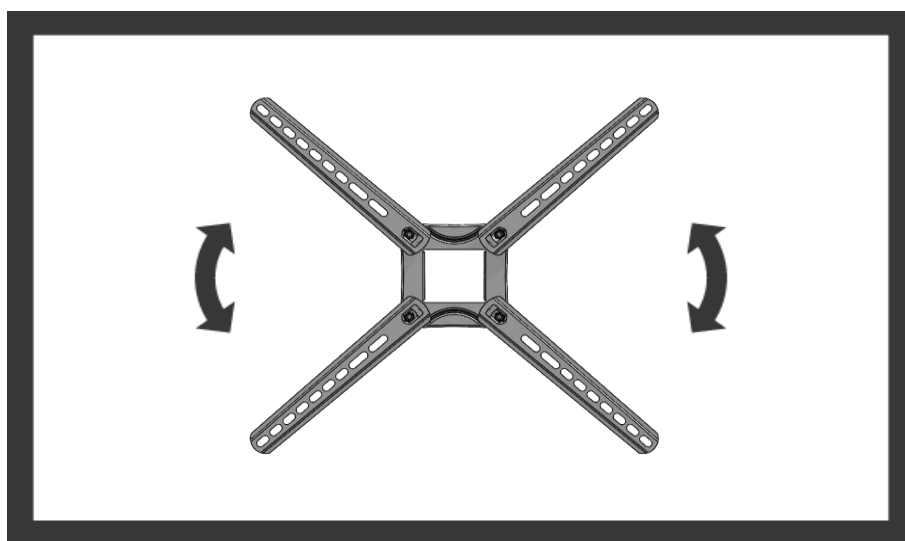


To disconnect the TV, remove the screws from both sides of the tilt mechanism (I) and lift the TV (II).

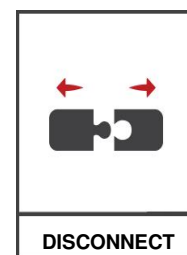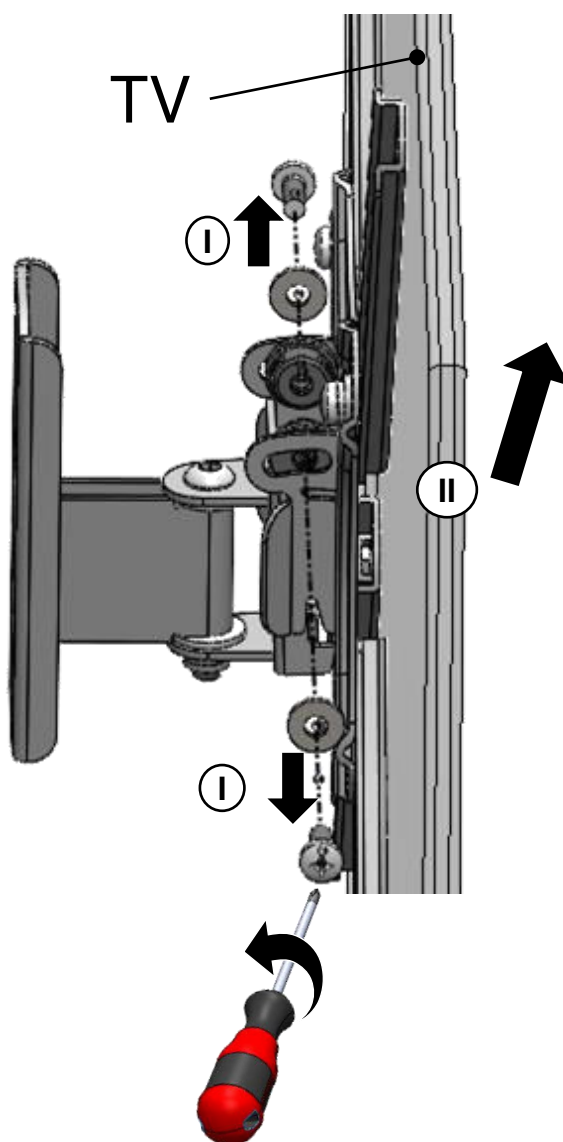

BACKSCREEN CONNECTION POSITIONING OPTIONS


1

75x75, 100x100

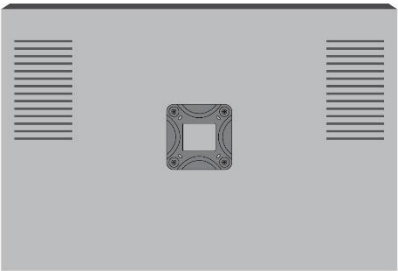


2

 200x100

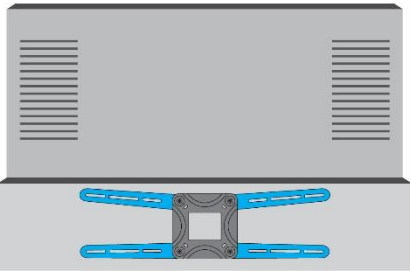


3

 300x200, 400x200, 400x300

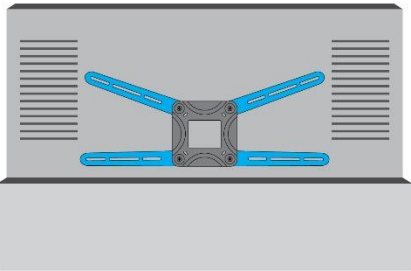


4

 200x200, 300x300

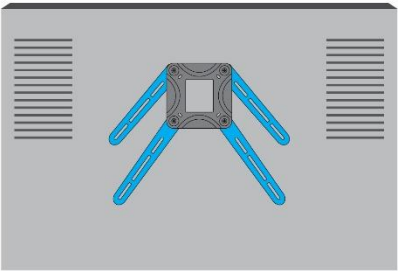


5

 200x200, 300x300

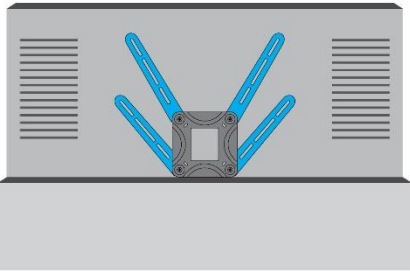


6

 100x200

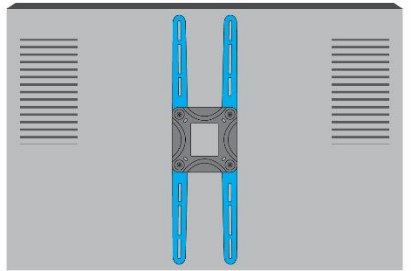


7

 
200x200, 300x300, 300x400, 400x400

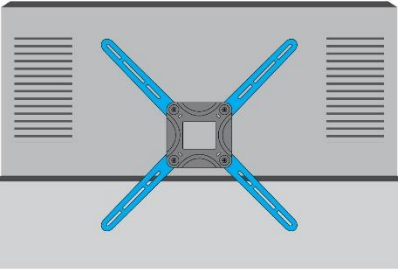

8

 300x200, 400x200, 400x300

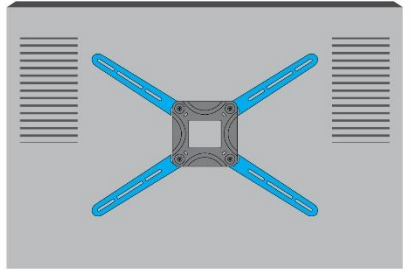


www.barkanmounts.com/FAQ

VESA-Positions-BNG-2111-400x400

