 


TV Wall Mount

Black

 
White

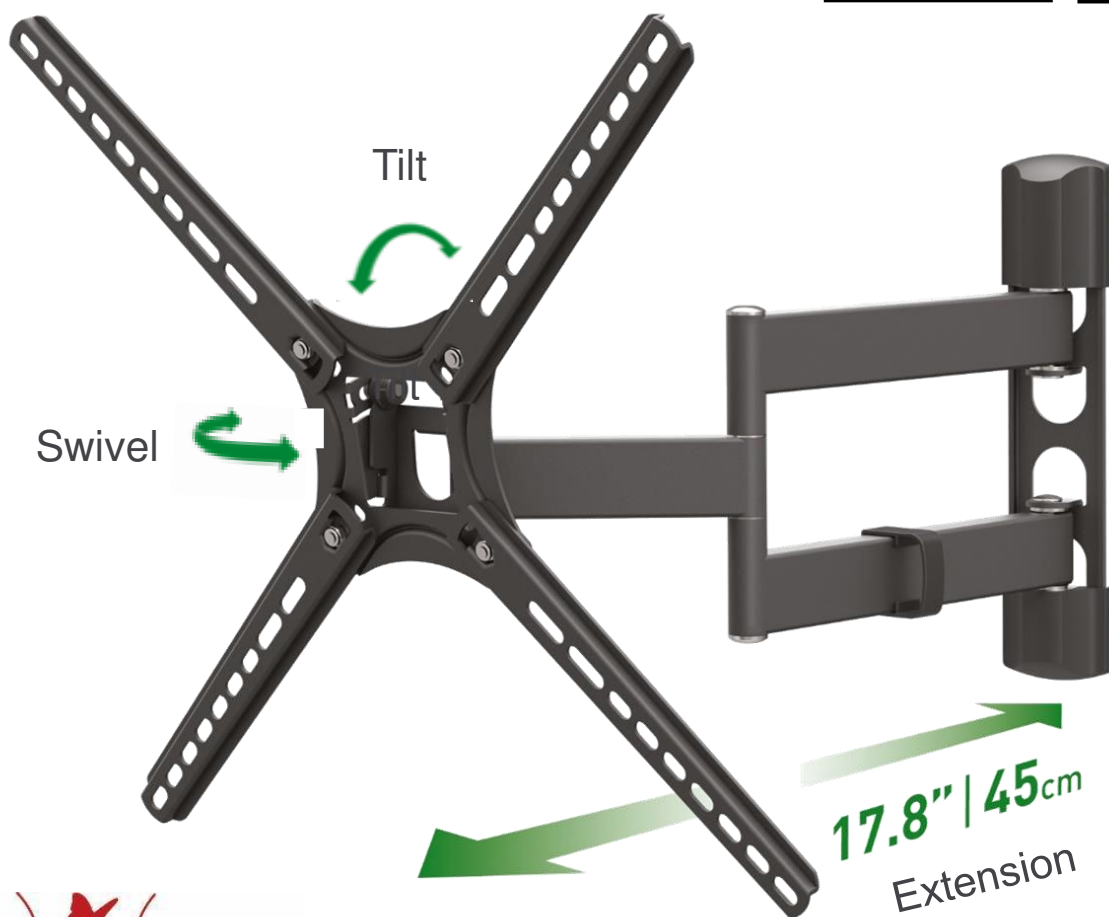

Download Assembly Instructions with Text

 


 


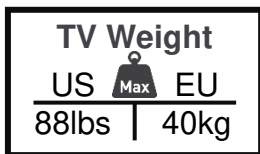

 



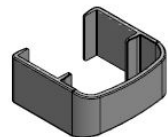 
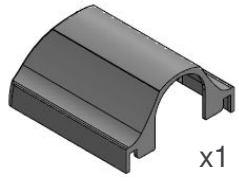 
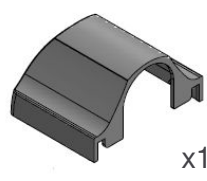 
For more information: barkanmounts.com

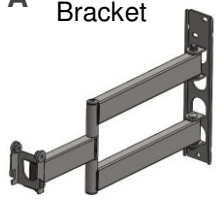If you are satisfied with the product, please give us a 5 stars ★★★★★ rating on the website you bought it from. If you are not satisfied please contact us at <https://www.barkanmounts.com/support> and we will solve the problem for you.



Safety instructions and installation warnings (provided separately) must be read in full, prior to assembly.

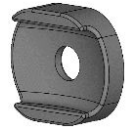
Included Parts not to scale

<p>A Bracket</p>  <p>x1</p>	<p>B TV Plate</p>  <p>x1</p>	<p>C Adaptor</p>  <p>x4</p>	<p>D Drilling Template</p>  <p>x1</p>
<p>Z6</p>  <p>x6</p>	<p>Z7</p>  <p>x4</p>	<p>Z8</p>  <p>x2</p>	<p>Z9</p>  <p>x2</p>
<p>Z10</p>  <p>x4</p>	<p>W1</p>  <p>x3</p>	<p>W2</p>  <p>x3</p>	<p>W3</p>  <p>x3</p>
<p>Y1 Cable Management</p>  <p>x1</p>	<p>Y2 Wall Plate Plastic Cover</p>  <p>x1</p>	<p>Y3 Wall Plate Plastic Cover</p>  <p>x1</p>	

#	M	L mm	L inch	pcs
Z1	4	20	3/4	4
Z2	6	16	5/8	4
Z3	6	25	1	4
Z4	8	25	1	4
Z5	8	45	1 3/4	4



 Required Tools

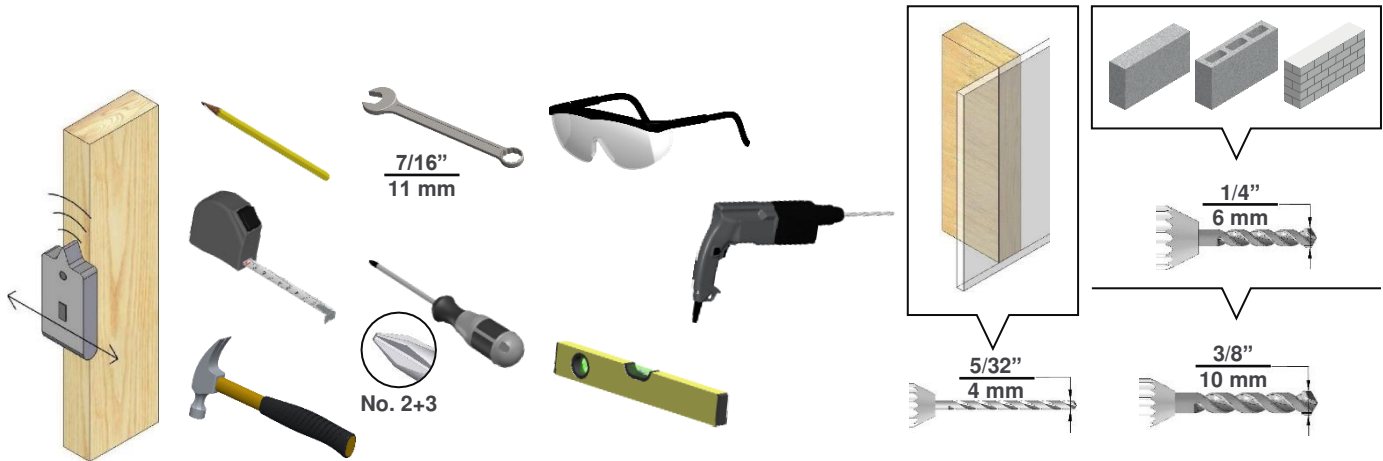





7/16" / 11 mm

No. 2+3

5/32" / 4 mm



1/4" / 6 mm

    3/8" / 10 mm

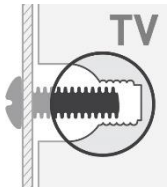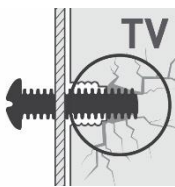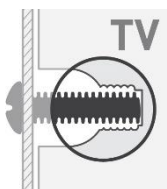
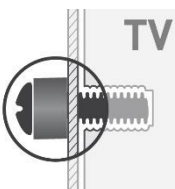
Wrong		
Right		
Purchase longer screws.		Use the spacers (Z7) in order to adjust the screws length inside the TV.

1

  Continue according to your TV mounting hole pattern.

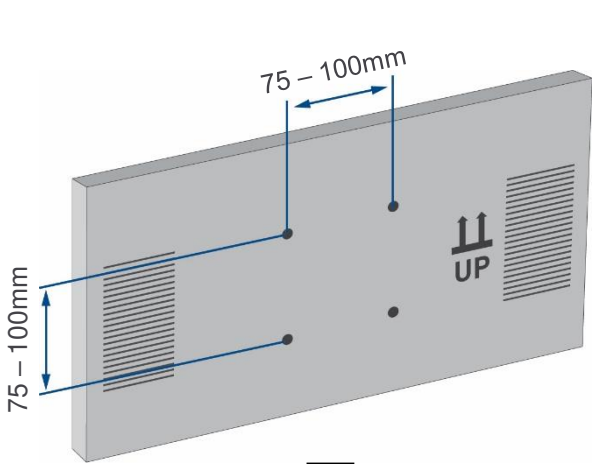

1a

 
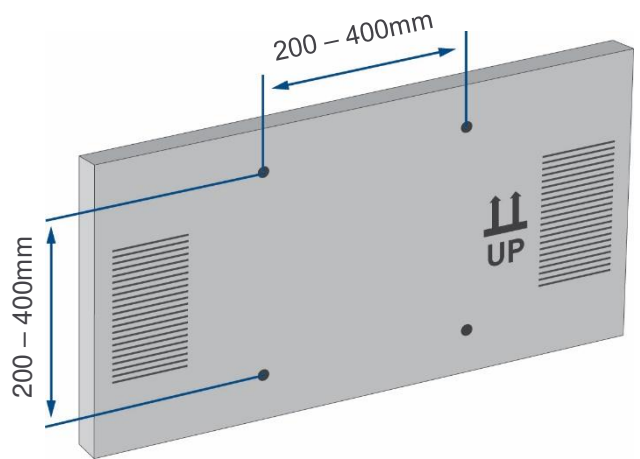 


1b

Page 4

1a

  75x75 mm up to 100x100 mm hole pattern.

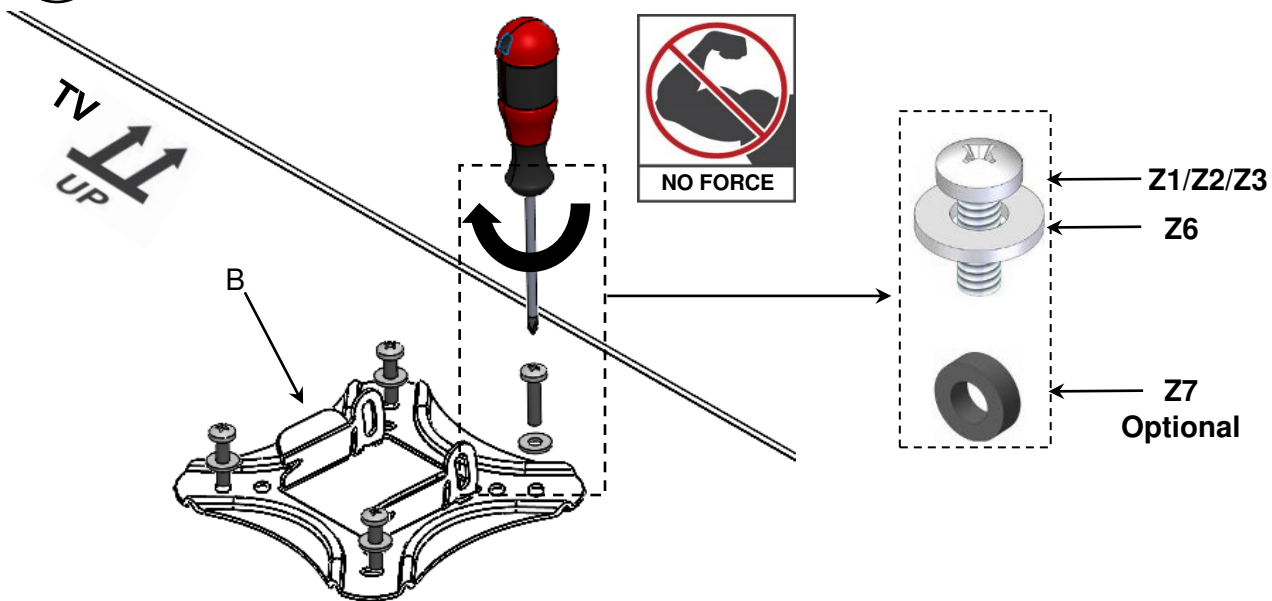



2

Page 6


1b) Hole pattern 100x200 mm up to 400x400 mm:
Disassemble the screws, connect the 4 Adaptors to the TV Plate and reassemble the screws.

 ①








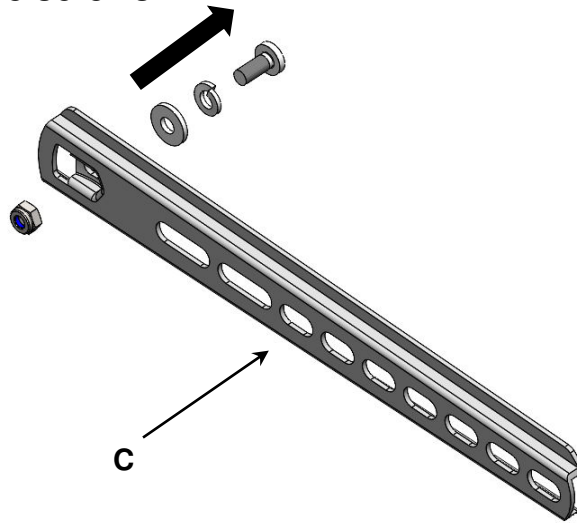


②

 
Flat TV

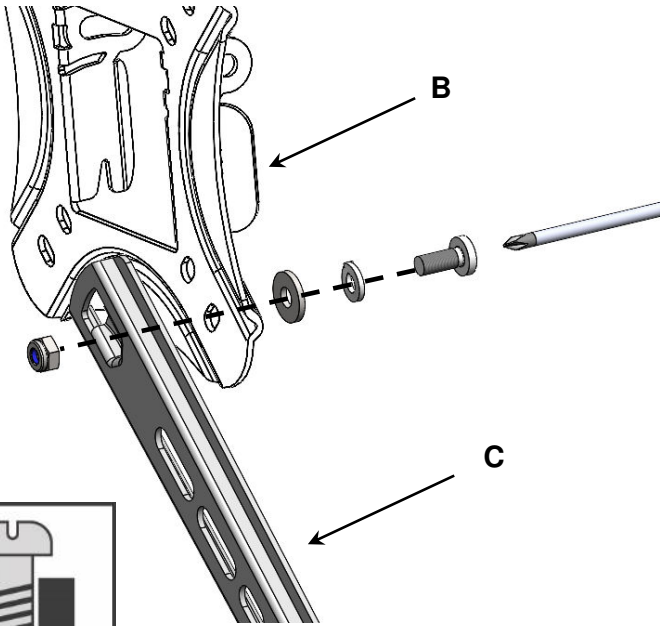

Curved TV

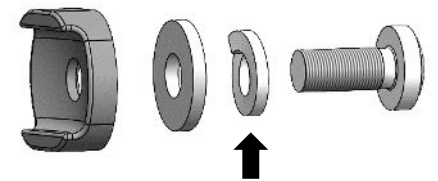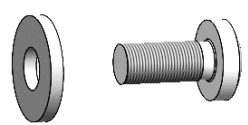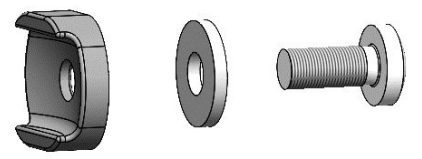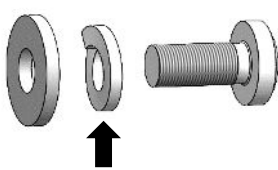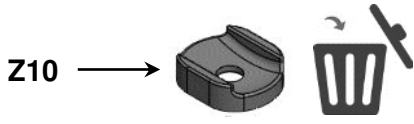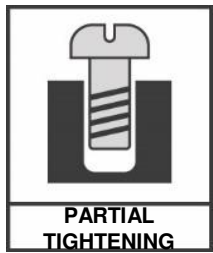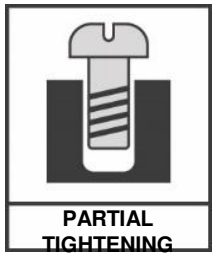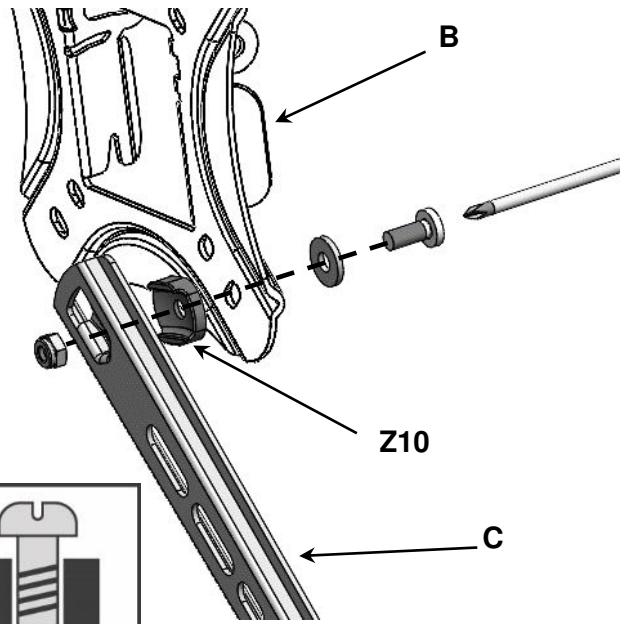        


 Position the Adaptors according to your TV's hole pattern.

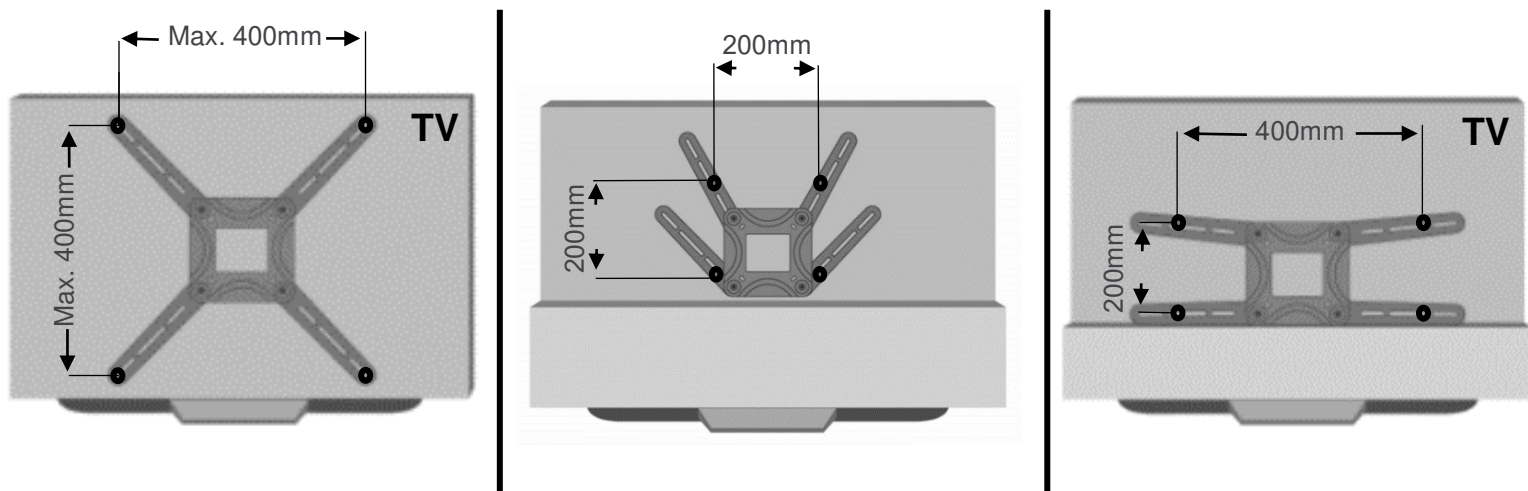


For more positioning options turn to page 10.

 Connect the TV Plate with the Adaptors to the TV in all 4 connection holes.

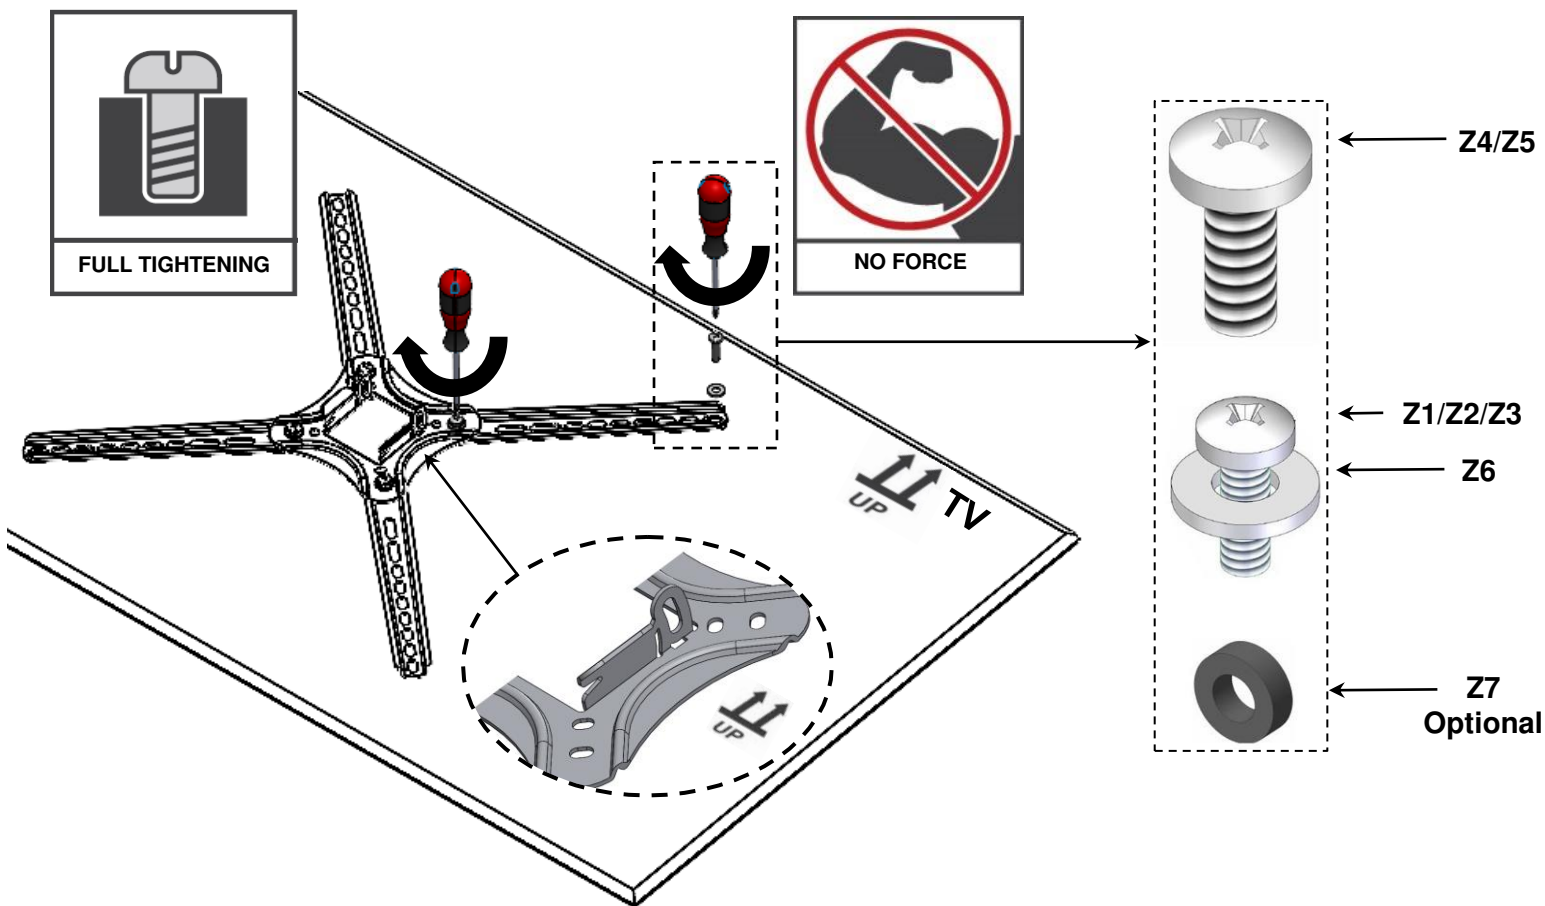


 2 Measure the distance between the location of the TV's mounting holes' center and the bottom of the TV, in order to set the required height of the TV.

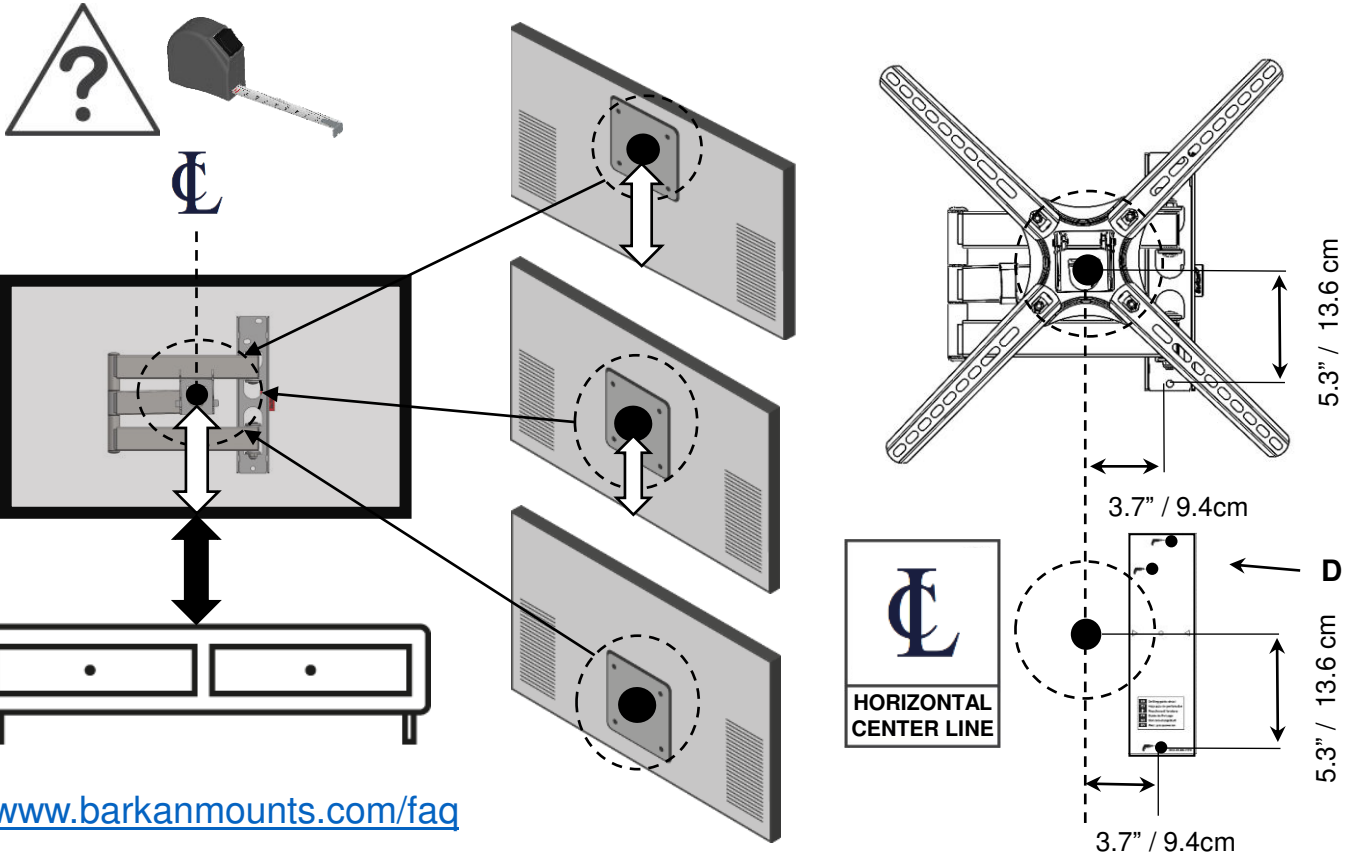


<https://www.barkanmounts.com/faq>

 
3 Follow the steps according to your wall type.

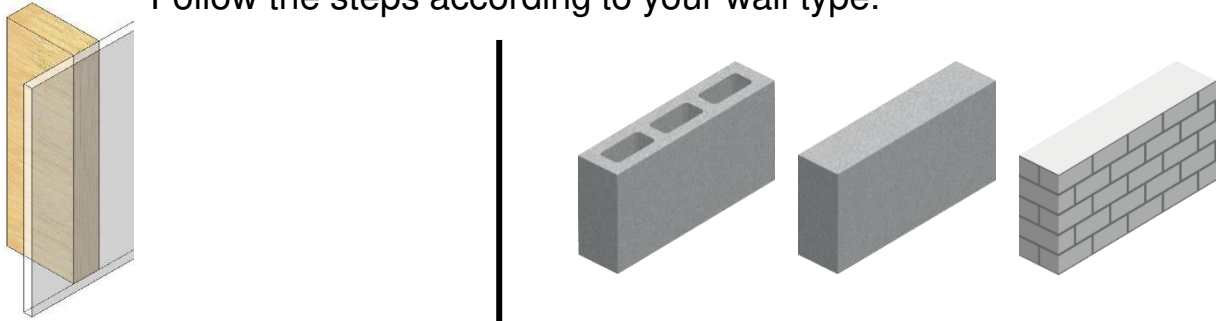

 
4 Mark the holes on the wall according to the required height.

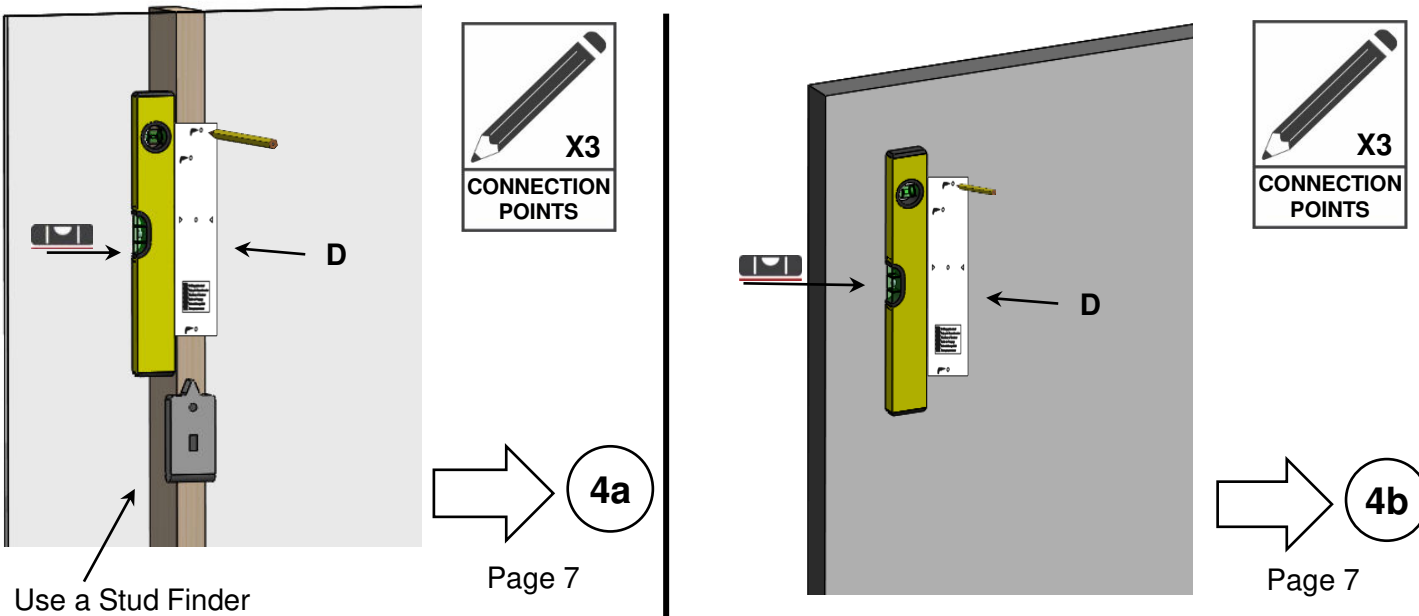

 4a Make sure all holes are drilled inside the studs.

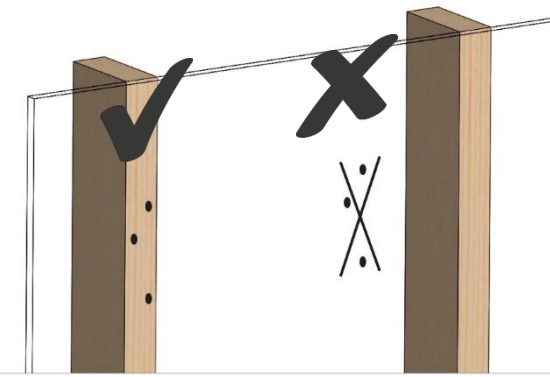


Drill with 5/32" \ 4mm drill bit.



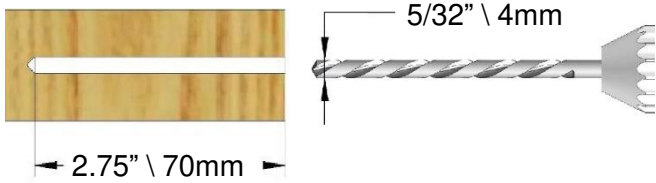 


4b


 
First use 1/4" \ 6mm drill bit.

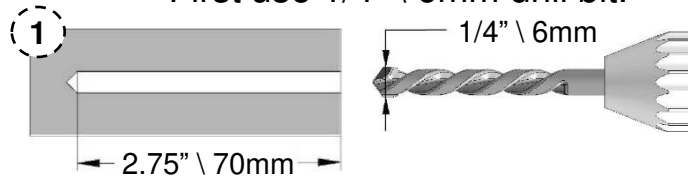



Afterwards use 3/8" \ 10mm drill bit.

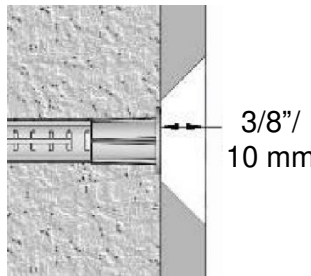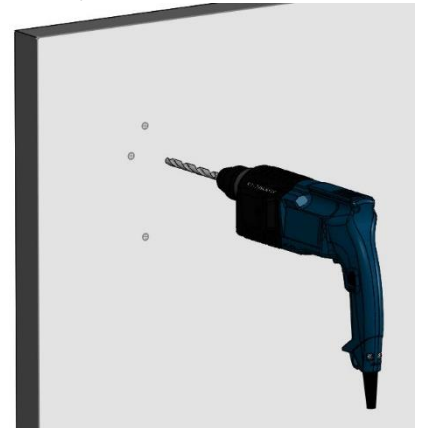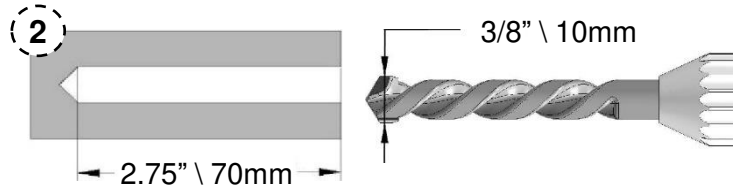   

  The anchor must be sunk at least 3/8"/10 mm into the plaster coating.

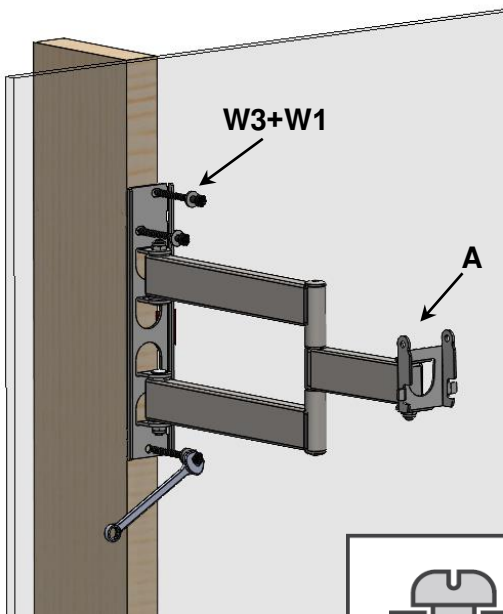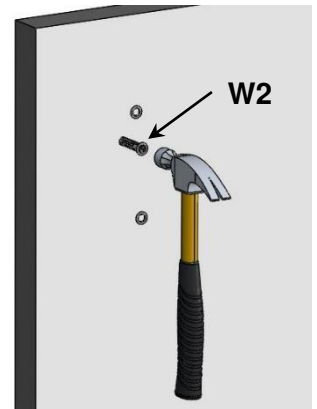

7/16" \ 11mm

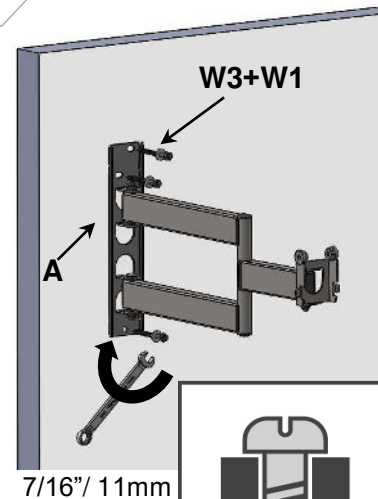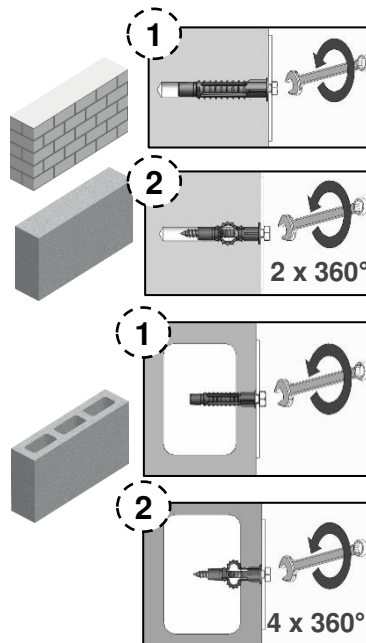  


7/16" \ 11mm




5 Weight test

 
Apply force on the upper part of the Bracket and make sure it is well connected.

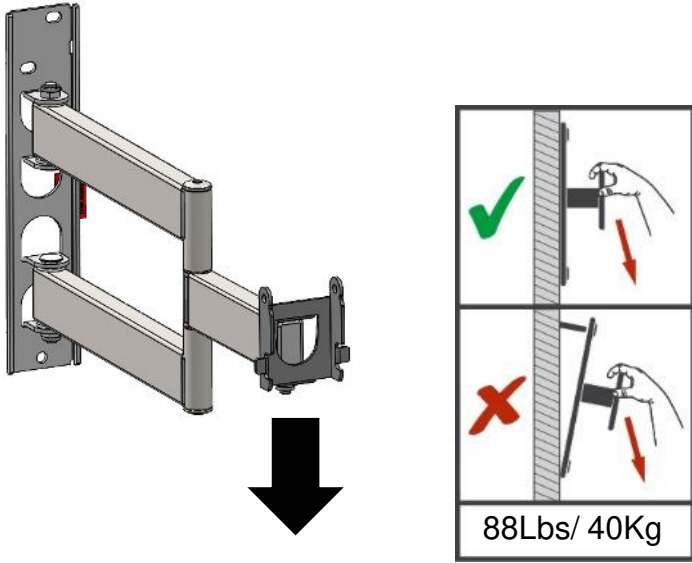

 
6 Assemble the Wall Plate Plastic Covers.

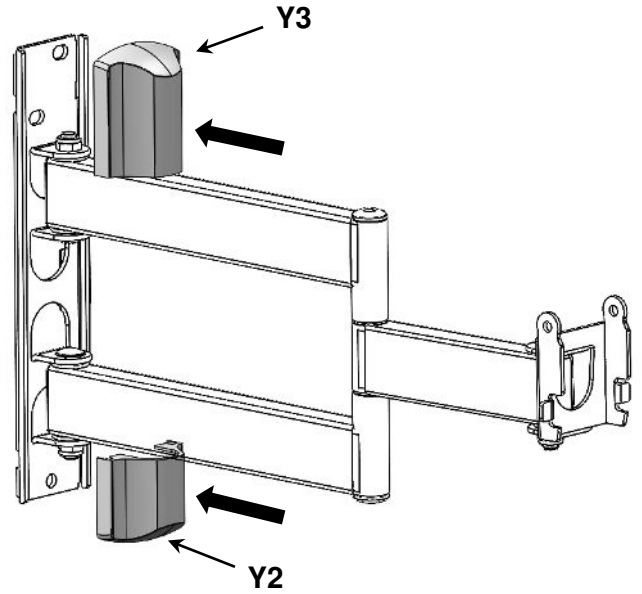




7 Assemble the Cable Management.

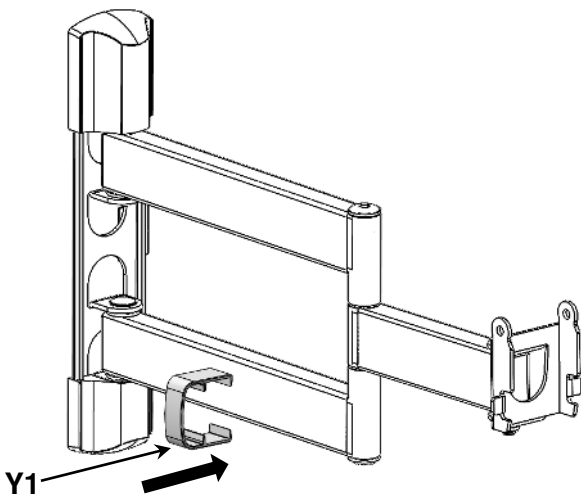 

 8 Place the plastic nut-housings (Z9), and then insert the two nuts (Z8).

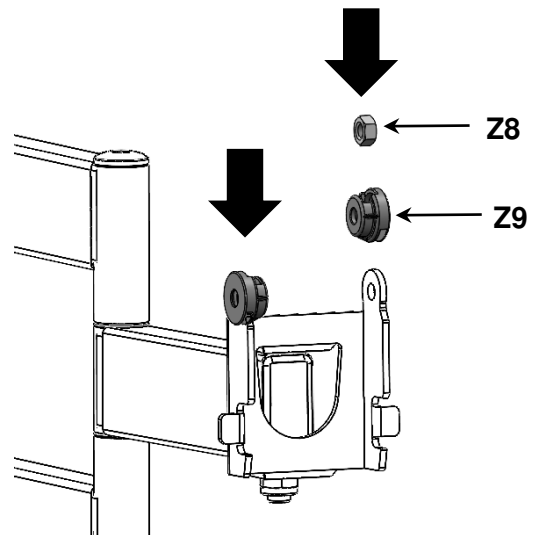


   9 Connect the TV with the TV Plate to the Bracket.

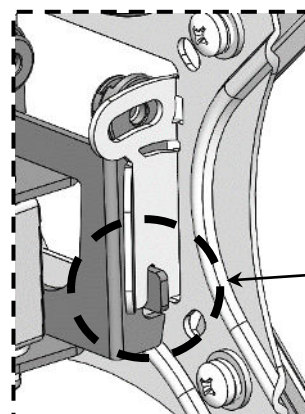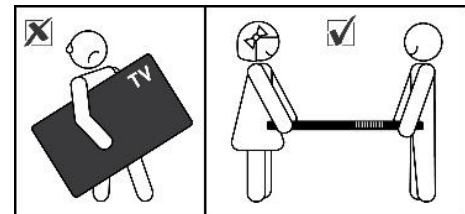
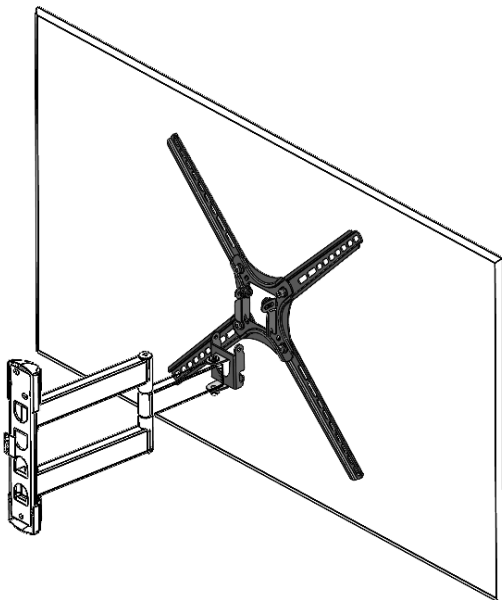


Make sure that the TV Plate slots are positioned properly on 2 small beams (Bracket).


 
- 10** Insert and tighten the screws from both sides to create friction for the tilt mechanism. Adjust the TV tilt angle carefully.

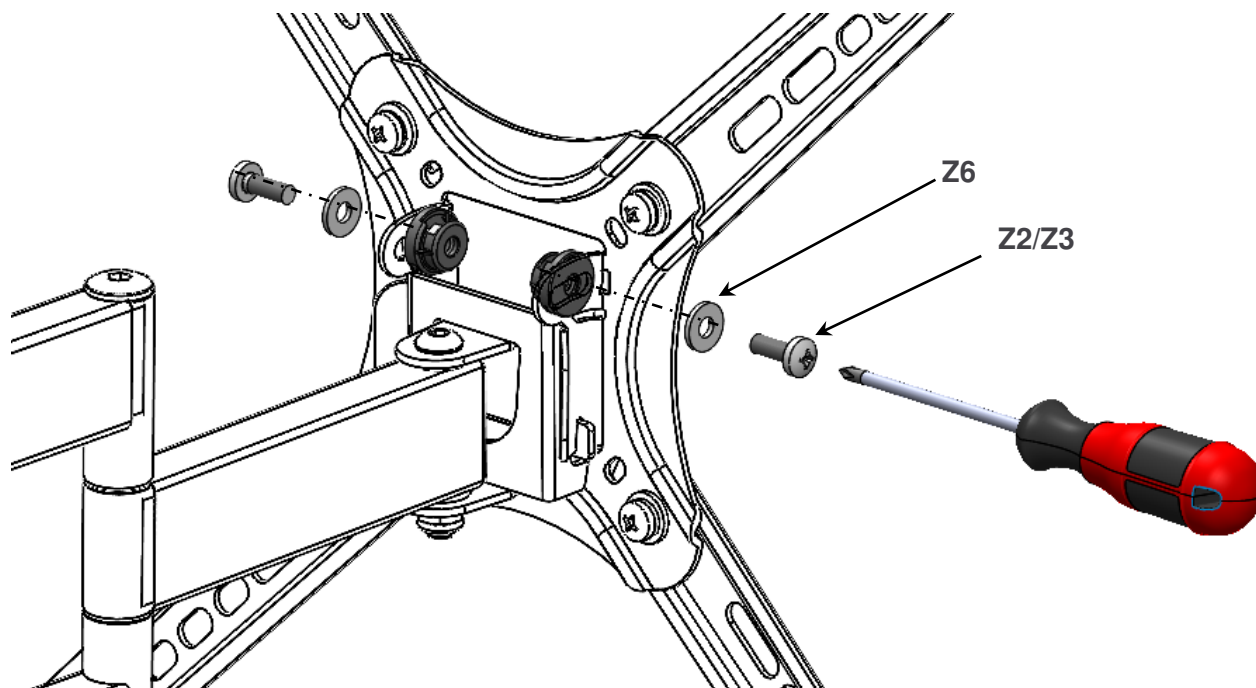







 
 
- 11** Place the TV cables in the Cable Management.

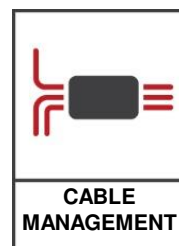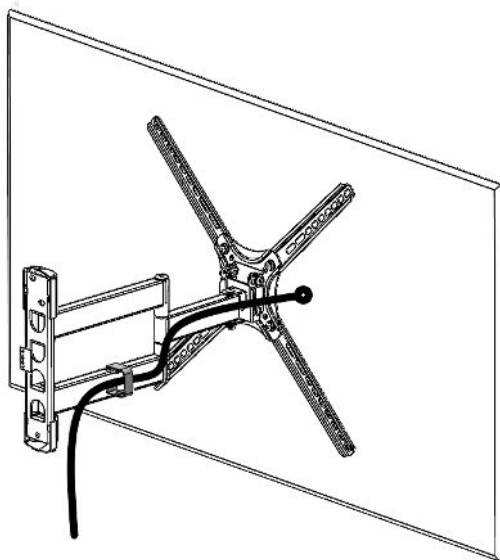

- 12** Level the TV.

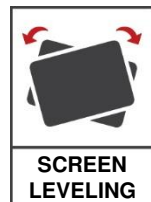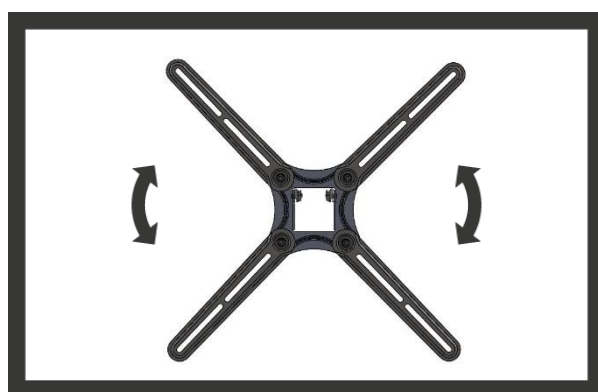  

        BACKSCREEN CONNECTION POSITIONING OPTIONS

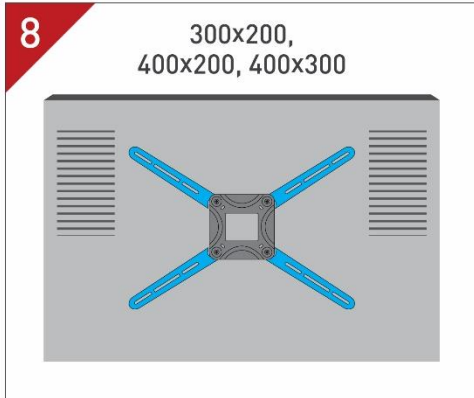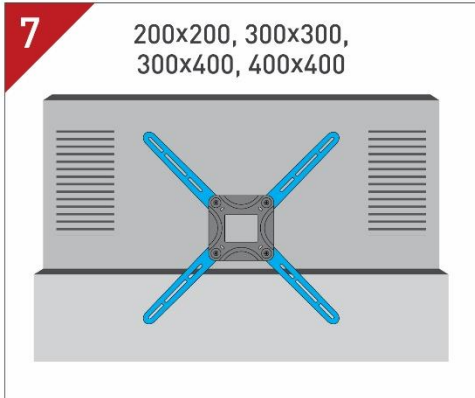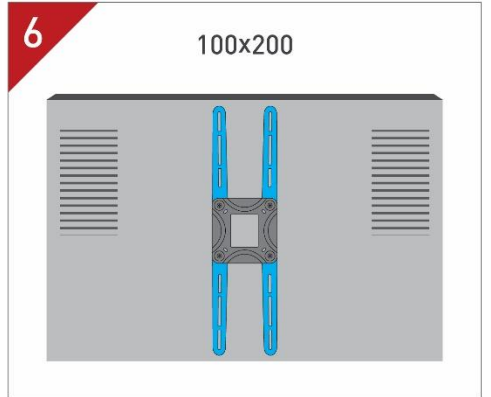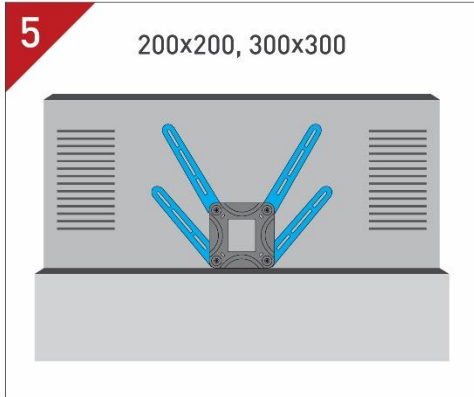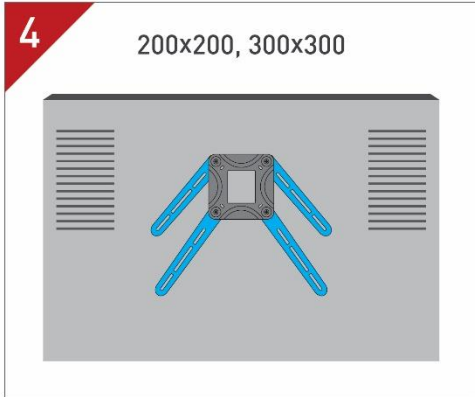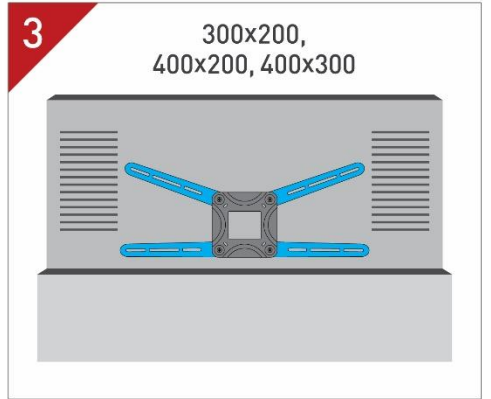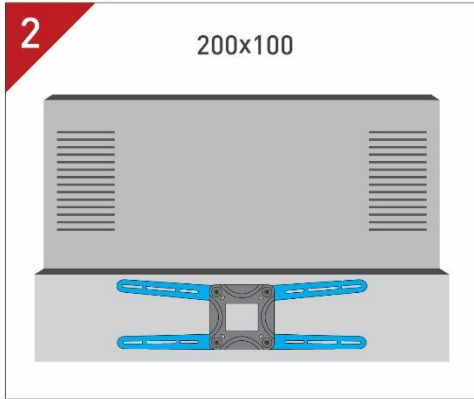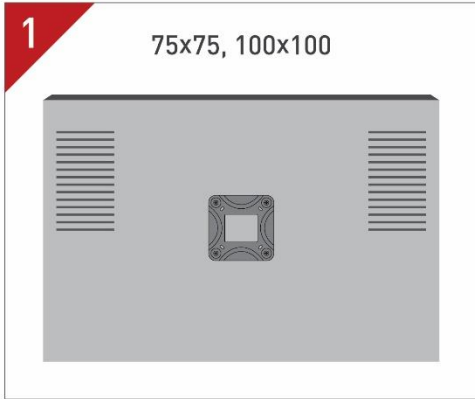

VEESA-Positions-BNC-2111-400x400

