

## **Assembly instructions**



Download Assembly Instructions with Text

For more information: barkanmounts.com




E310+-MAN-ONL-2304





Safety instructions and installation warnings (provided separately) must be read in full, prior to assembly.


## Included Parts not to scale

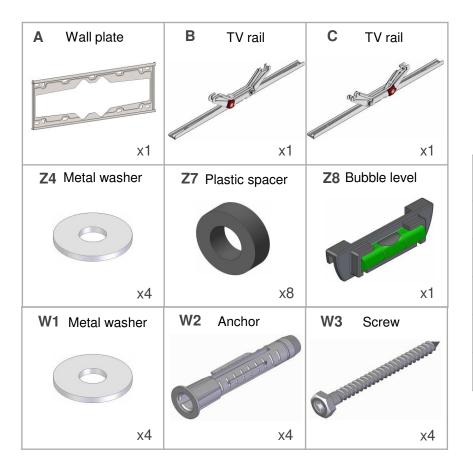




#	М	L mm	L inch	pcs
<b>Z</b> 1	6	16	<sup>5</sup> /8	4
Z2	6	25	1	4
Z3	4	20	<sup>3</sup> / <sub>4</sub>	4
Z5	8	25	1	4
<b>Z</b> 6	8	45	1 <sup>3</sup> /4	4


**Required Tools** 

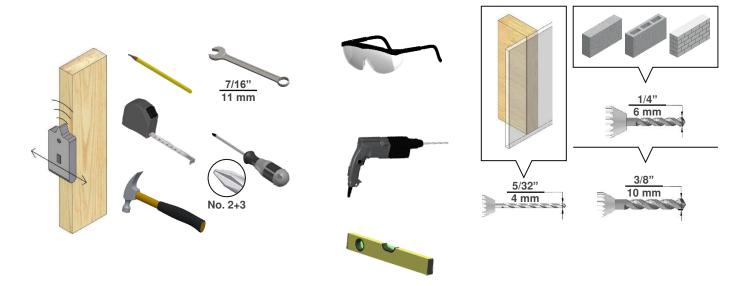


#### Connect the Vertical rails to the back of the TV

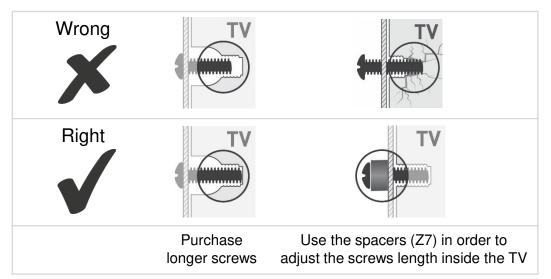


Follow the steps according to your TV's cable connection type. (Is it parallel or perpendicular to the wall?)

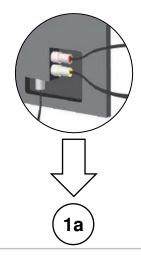

1

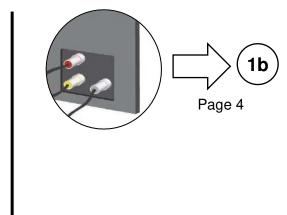


**1a** Connect the TV rails (B and C) to the back of the TV at all 4 connection holes, and place the plastic spacers (Z7) above the TV rails.

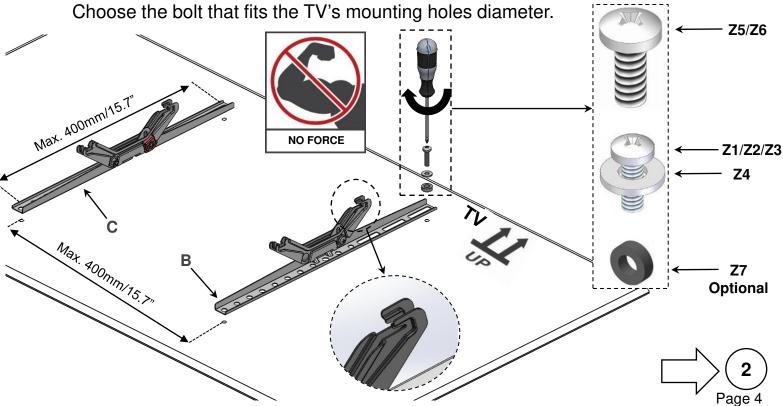

For more positioning options please turn to the last page

**1b** Connect the TV rails (B and C) to the back of TV at all 4 connection holes, while placing the plastic spacers (Z7) between the TV rails (B,C) and the back of the TV. Choose the screw that fits the TV's mounting holes diameter.

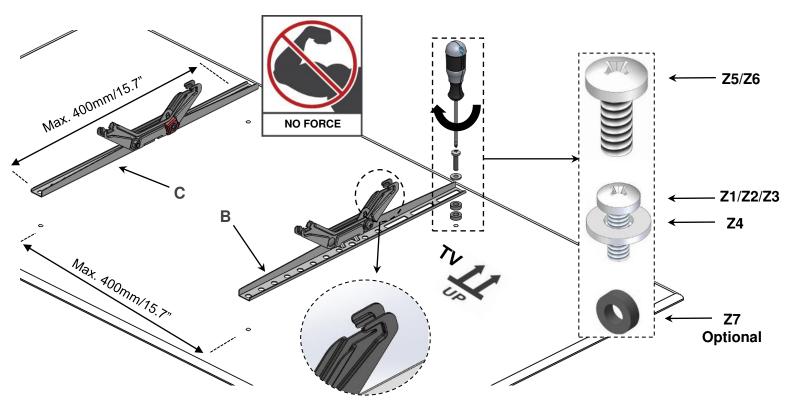


For more positioning options please turn to the last page

#### Install the Wall plate on the Wall

2

Measure the distance between the location of the TV's mounting holes center and the bottom of the TV, in order to set the required height of the TV

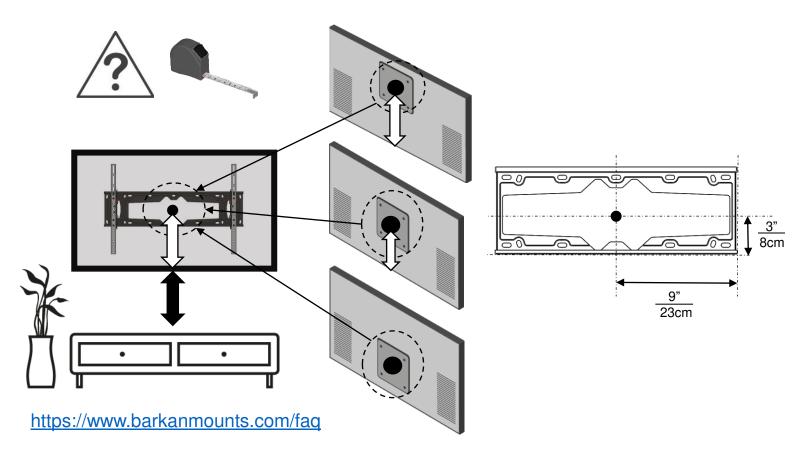


Follow the steps according to your wall type

Page 5




3


4

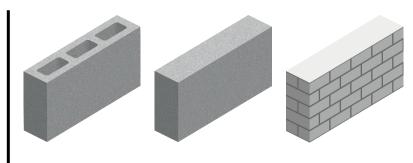



Mark the holes on the wall according to the required height

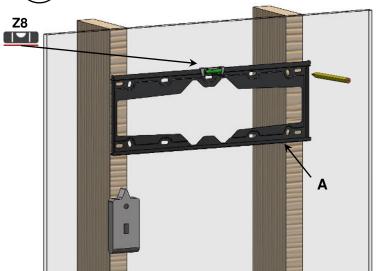



Use a Stud Finder

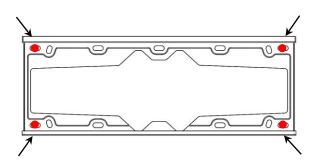

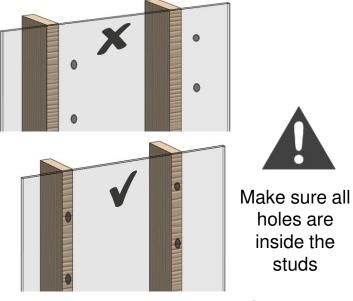

 

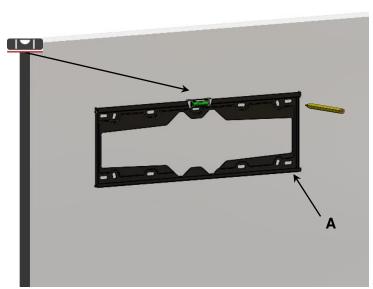

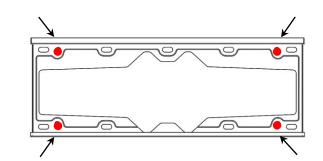





 $\odot$ 


0

DANGER

 
Make sure there are no electrical/water line in the wall before drilling and then drill according to the marking



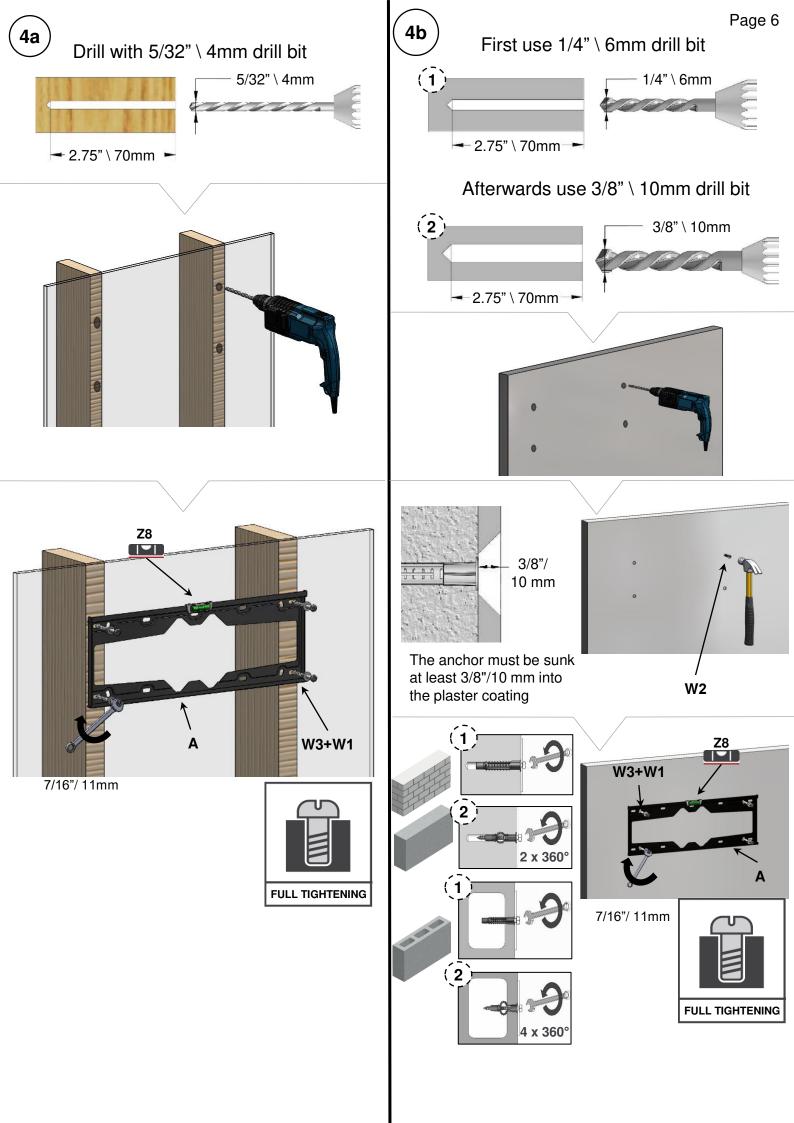

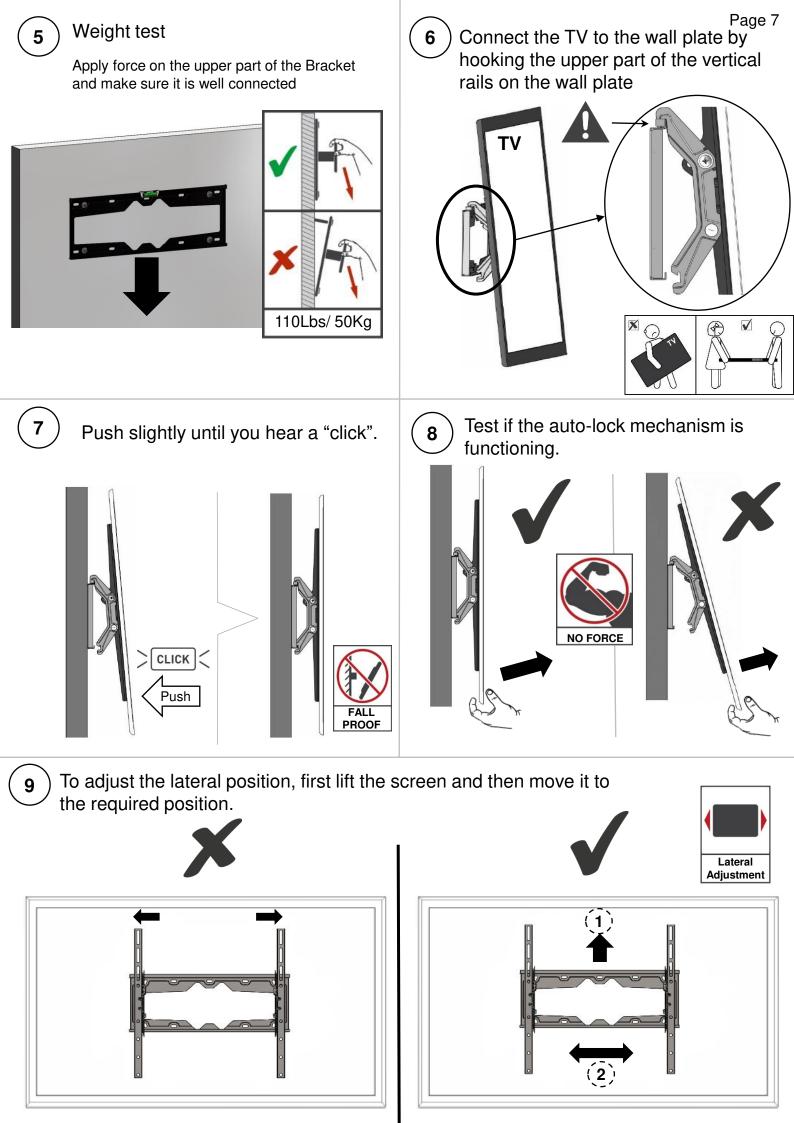


# Tighten the screw in order to create the necessary friction for the tool free tilt mechanism.

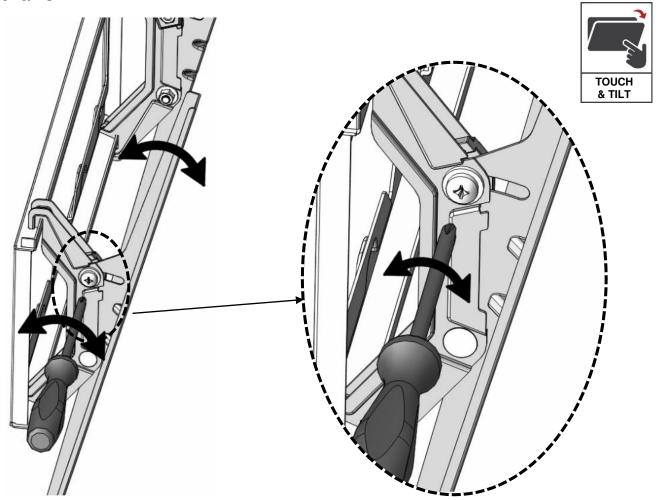




10

#### To disconnect the TV, pull gently up and out.

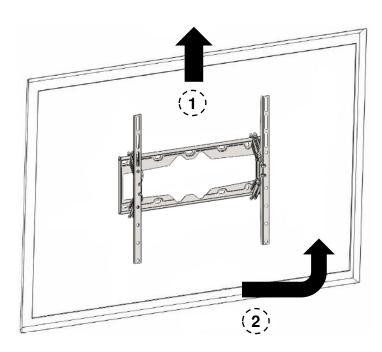

 

### **BACKSCREEN CONNECTION POSITIONING OPTIONS**

A few sizes of vertical rails (marked in blue) for TV backscreen connections are available. The positions are (Width × Height) 75×75 - 600×400 millimeters.

